


ROI-DP Mini-Converter

DisplayPort to SDI Scaler

Installation & Operation Guide

Version 1.0

Published: July 2, 2015

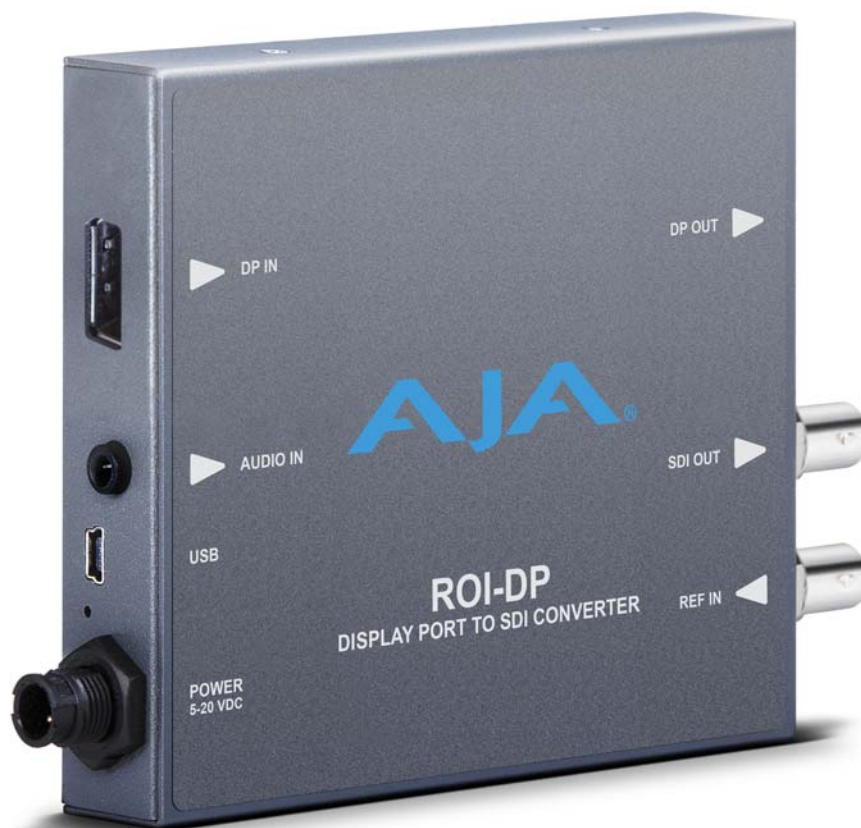

Because it matters.®

AJA
VIDEO SYSTEMS

Table of Contents

Notices	4
Trademarks	4
Copyright	4
Contacting Support	4
Chapter 1: Introduction	5
Overview	5
Features	6
Pixel Clock Rate Limitation	6
MiniConfig Overview	6
Block Diagram	7
I/O Connections	7
Typical ROI-DP Configurations	8
Installation	9
Chapter 2: Operation	10
USB Control and Setup—Using AJA MiniConfig	10
Running MiniConfig	11
Operating MiniConfig	11
Tabbed Screens	13
Input Region of Interest Tab Screen	13
Output Tab Screen	17
Genlock Tab Screen	19
Audio Tab Screen	20
Update Tab Screen	21
Info Tab Screen	22
Appendix A: Specifications	23
Video Input	23
Input Formats	23
Color Range	23
Reference Input	23
Video Output	23
Output Formats	23
Audio Inputs	24
Audio Output	24
User Controls	24
Physical	24
Power	24
Size	24
Environment	24
Appendix B: Safety & Compliance	25
Federal Communications Commission (FCC) Compliance Notices	25
Class B Interference Statement	25
FCC Caution	25
Canadian ICES Statement	25
European Union and European Free Trade Association (EFTA) Regulatory Compliance	26
Declaration of Conformity	26
Recycling Notice	26

Korea KCC Compliance Statement 27
Taiwan Compliance Statement 27
Japanese Compliance Statement 27
Translated Warning and Caution Messages..... 28
Before Operation Please Read These Instructions 28
Warranty Information35
Limited Warranty 35
Index.....36

Notices

Trademarks

AJA®, Io®, Ki Pro®, KONA®, KUMO®, T-TAP®, Because it matters.® and ROI® are registered trademarks of AJA Video Systems, Inc. in the United States. AJA and Ki Pro are trademarks of AJA Video Systems, Inc. registered in other countries. AJA Control Room™, CION™, Corvid Ultra™, FiDO™, Science of the Beautiful™, TruScale™, TruZoom™, V2Analog™ and V2Digital™ are trademarks of AJA Video Systems, Inc.

AirPort, Apple, Apple logo, AppleShare, AppleTalk, FireWire, iPod, iPod touch, Mac and Macintosh are registered trademarks of Apple Inc. Final Cut Pro, QuickTime and QuickTime logo are trademarks of Apple Inc.

Avid, Avid DNxHD and Media Composer are registered trademarks of Avid Technology, Inc.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

DVI is a registered trademark of DDWG.

TASCAM is a registered trademark of TEAC Corporation.

Dolby® and the double-D Dolby logo are registered trademarks of Dolby Laboratories Licensing Corporation.

All other trademarks are the property of their respective holders.

Copyright

Copyright © 2015 AJA Video Systems, Inc. All rights reserved. All information in this manual is subject to change without notice. No part of the document may be reproduced or transmitted in any form, or by any means, electronic or mechanical, including photocopying or recording, without the express written permission of AJA Video Systems, Inc.

Contacting Support

When calling for support, have all information at hand prior to calling.

To contact AJA for sales or support, use any of the following methods:

Telephone: +1.530.271.3190

FAX: +1.530.271.3140

Web: <http://www.aja.com>

Support Email: support@aja.com

Sales Email: sales@aja.com

Chapter 1: Introduction



Overview

AJA's ROI-DP (region of interest) scaling converter can be used out-of-the-box to convert DisplayPort input signals to SDI output. In default mode, ROI-DP automatically detects the input DisplayPort format and converts it to the SDI video format. In this startup Auto mode, the full-size DisplayPort input is output to the SDI output. The picture's aspect ratio is maintained and if the SDI monitor is larger than the DisplayPort input, unused area is filled with matte color. Default audio setup passes 8-channel DisplayPort audio.

To realize the full power of ROI-DP, however, you will use the supplied USB cable and AJA's MiniConfig application (included on your CD) to select SDI output format and perform a host of region-of-interest and output display scaling operations.

Audio Handling: Embedded audio from the DisplayPort input can be passed to the SDI output stream. Analog audio can also be input via a standard 3.5mm audio cable and mapped to the embedded SDI output stream, or the output can be a combination of both audio inputs.

Control Interface: For control, the ROI-DP is connected to a computer via USB. The ROI-DP has no local, physical user-interface (no dipswitch settings). The ROI-DP can operate stand-alone without a USB connection to the host. In this mode, the ROI-DP automatically adapts to the input DisplayPort signal, and operates according to defaults or as last configured via the AJA MiniConfig application (see ["USB Control and Setup—Using AJA MiniConfig" on page 10](#)).

HDCP Protection The ROI-DP honors HDCP, and will not allow an HDCP link. If the input content is HDCP protected, no source video will be displayed on the ROI-DP's DisplayPort pass-through connector, or on the ROI-DP's SDI output.

Features

- Convert DisplayPort input to 3G/HD/SD-SDI output
- User-adjustable “region of interest”
- 4:3/16:9 conversion modes supported
- Setup via PC/Mac using USB port and supplied USB cable (AJA MiniConfig software application supplied on CD)
- Frame-rate conversion
- Automatic configuration to input video raster and frame rate
- SDI output configurable to most common SD and HD formats (1080p60 max)
- Ability to disable edge filtering.
- Genlock with reference input
- Horizontal and Vertical video delay from sync input
- Audio input via 3.5mm 2-channel analog input or 8-channel DisplayPort embedded
- Embedded SDI audio out (up to 8 channels)
- Uses universal input +5V power supply AJA model DWP-U-R1 (included)
- 5-year warranty

NOTE: SDI frame rates are limited by the 167MHz maximum rate of the DP Receiver.

Pixel Clock Rate Limitation

Some sources can generate pixel clock rates that exceed the capabilities of the ROI-DP. The pixel clock is a combination of the video resolution and its vertical rate. It may not be obvious what the resulting pixel clock will be for a particular resolution or vertical rate.



Caution!

If the incoming video's pixel clock rate is too high, the ROI-DP will generate a full screen red matte on the SDI output to indicate this error condition. MiniConfig will also display an “Exceeds max rate” error message. A downstream DP monitor will still display the DP video. See page 19 for a potential solution.

MiniConfig Overview

Using AJA's MiniConfig application, you can set up and control the following:

- Video:**
- Output format select
 - Disable edge filtering
 - Aspect Ratio convert
 - 4:3 to 16:9: Sidebar, 14:9, Full
 - 16:9 or 16:10 to 4:3: Letterbox, Full
 - 16:10 to 16:9: Letterbox, Full

- Region of Interest:**
- On/Off
 - Size/Position (scroll bars, buttons, or numerical entry)


- Audio:**
- Input Select: Analog (2-channel), DisplayPort (8-channel)
 - Embed into SDI and/or DP outputs.
 - Mute Audio out

- RGB Range:**
- Full or SMPTE

- Genlock:
- Standard sync options
 - H- and V- video delay from sync input

Block Diagram

Figure 1. ROI-DP Converter/Scaler, Simplified Block Diagram

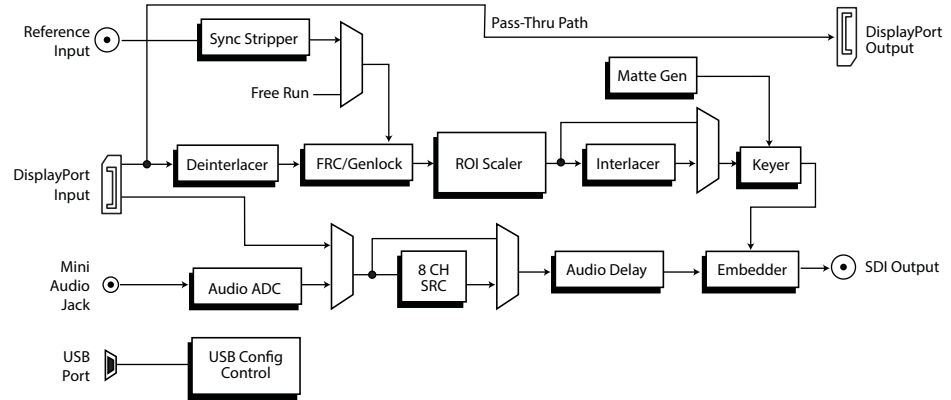

I/O Connections

Figure 2. ROI-DP Converter/Scaler



DisplayPort Input: Connects to your computer.

Analog Audio: A single 3.5 mm analog audio connector accepts two channels of analog audio which can be embedded into the SDI output as determined by the audio configuration set using MiniConfig.

USB Port: Accepts USB mini connector

DisplayPort Output: This is a pass-through output for use on a second computer monitor for using Screen Picker. Connections are the same as described for DisplayPort input above.

SDI Video Output: Standard BNC connector for coaxial SDI monitor connection.

Reference Video Input: The Reference BNC accepts an Output timing reference signal. The reference can be SD Blackburst or HD tri-level sync.

Typical ROI-DP Configurations

Two typical configurations for using the ROI-DP for scaling of desktop region-of-interest video are illustrated in the following figures. In these configurations, the pass-through monitor is used to view the subject desktop video and use the MiniConfig application's Screen Picker function to select the desired region for output to SDI (see "[Variable Selection](#)" on page 14).

Figure 3. ROI-DP with Laptop Computer, System Interconnect Diagram


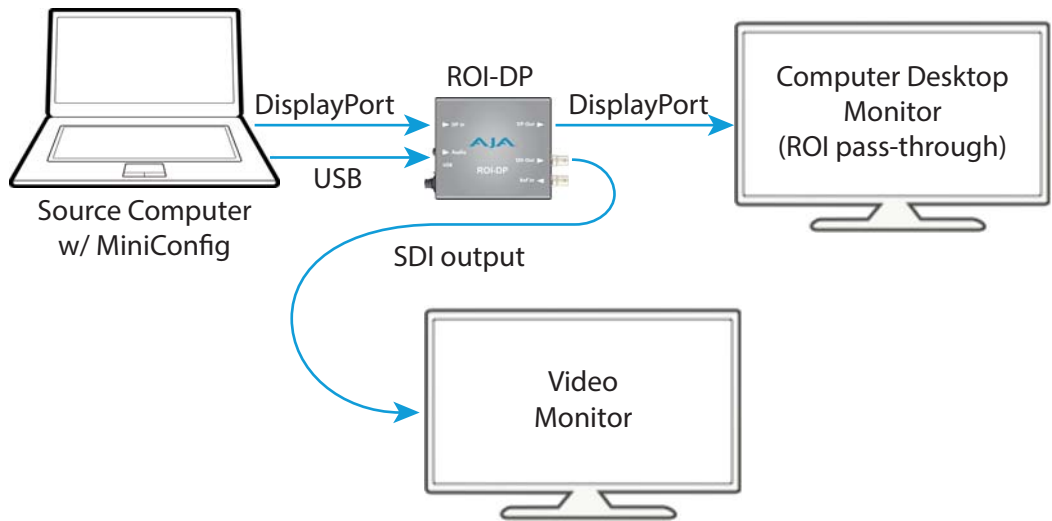


Figure 4. ROI-DP with Tower Computer & Two Monitors, System Interconnect Diagram

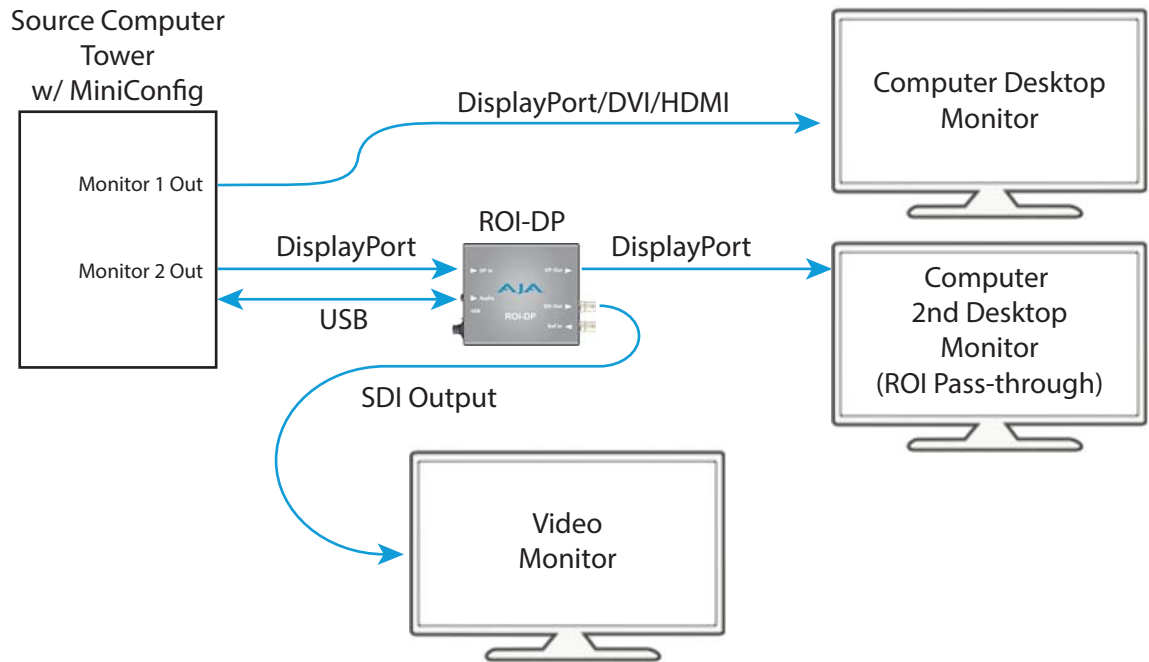

Installation

Typically, ROI-DP installation consists of the following steps:

1. Ensure the ROI-DP is disconnected from power.
2. Connect your computer or video console (DisplayPort) monitor output to the ROI-DP DisplayPort input connector.
3. Connect the ROI-DP DisplayPort output connector to a second computer monitor (optional).
4. Connect video monitor to the converter SDI output BNC.
5. Connect two-channel analog audio input to analog audio connector (optional)
6. Apply power to the converter (AJA power supply included).
7. The converter will now run using the default factory settings. If you wish to alter the factory settings, you'll need to:
 - Install the AJA MiniConfig software (supplied on CD) onto your computer.
 - Attach the converter via USB cable (included).
 - Make your changes using MiniConfig setup screens.

Chapter 2: Operation

IMPORTANT: Once the ROI-DP has been configured with MiniConfig, those settings will continue to be used in stand-alone mode (disconnected from USB) as long as the input format remains the same. If a different input format is connected, the ROI-DP will revert to Auto mode. However, if the original input format is re-connected, the ROI-DP will exit Auto mode and restore the previously configured settings for that format.

USB Control and Setup—Using AJA MiniConfig

The ROI-DP can be used right out of the box for some applications since it is designed to recognize inputs and perform standard actions automatically by default. However, to use its full capability, you must use AJA's MiniConfig software application for PCs and Macs. This same application can be used to update to new Mini-Converter software released by AJA.

Installing MiniConfig on a Mac: To install the application on a Mac, you may download the application from AJA.com, or insert the CD supplied with the Mini-Converter into the computer. Simply drag the "AJA MiniConfig" app. to your applications folder.



AJA MiniConfig

NOTE: *Macintosh computers must be Intel-based (G5, G4 and earlier models will not work with MiniConfig).*

Installing MiniConfig on a PC: To install the application on a Windows PC, insert the CD supplied with the Mini-Converter into the computer, locate the "MiniInstaller" application, and then double-click it. A Setup Wizard will guide you through the installation.

Figure 5. MiniConfig Setup Wizard



Just click Next to begin. Answer all questions in the subsequent dialogues. When you're done, you will be able to locate the MiniConfig application in the AJA folder in the Programs listing.


Running MiniConfig

Connect the Mini-Converter to the PC or Mac via the supplied USB cable. Connect the external power supply (supplied) to the Mini-Converter.

NOTE: On a Mac, when the Mini-Converter is connected to the USB port, you may see an alert like that shown following. If you do, press *Cancel*—this alert can be ignored.




PC Startup: To run MiniConfig on a PC, double-click on the AJA Mini Config icon on your desktop, or open the AJA folder in the program list and click on the AJA MiniConfig application located inside the Mini Config folder.

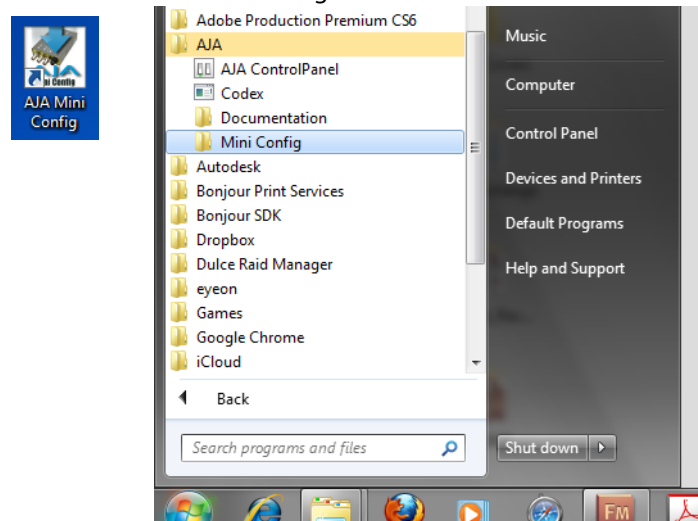

Mac Startup: To run MiniConfig on a Mac, double-click the Applications folder and locate the AJA MiniConfig application. Double-click the application to launch it.

Saving Setups: A *File* menu at the top of the MiniConfig application menu bar allows you to *Save* the state of the Mini-Converter, with your current settings, to a file for later recall. This allows you to set up the converter for different applications, storing each configuration (with *Save*) to a unique name for easy recall with the *Open* menu item. A *Revert to Factory Settings* menu item similarly allows you to change the settings back to AJA's factory defaults. An *Edit* menu allows you to cut and paste values to/from fields, just as in other applications.

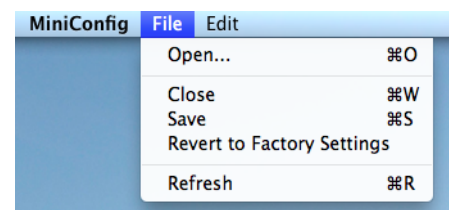

Operating MiniConfig

The MiniConfig application provides a graphic interface for viewing settings and updating software. It consists of an information area at the top that shows the available Mini-Converters attached to the computer via USB, with a graphical rendering of the selected Mini-Converter showing all the connectors and their current state.

Colored text next to the connectors indicates the signal type and what the Mini-Converter is doing:

- Blue text indicates the values automatically selected
- Black text indicates values that you have manually selected
- Red text indicates the Mini-Converter is not detecting a signal, or cannot operate with the current user settings.

NOTE: Even if no output device is detected, the SDI connector text still shows the signal it is outputting.


NOTE: Configuration settings in red will change based on the attached output device as well as input signals. For improved accuracy and reliability, you should configure the Mini-Converter only when the target output device is attached and input signals are supplied at the inputs.

Screens are virtually the same on both PC and Mac, with subtle differences that reflect the general look of the platform environment.

Running Multiple Mini-Converters:

MiniConfig can manage multiple AJA Mini-Converters connected via USB—even when they are of differing types. However it only connects to one at a time. You can choose which Mini-Converter you wish to control using the pulldown menu in the upper right hand corner. If you want to configure and update multiple Mini-Converters in parallel, you can do it by running multiple instances of the MiniConfig application and have each control a different Mini-Converter.

Figure 6. MiniConfig Screen

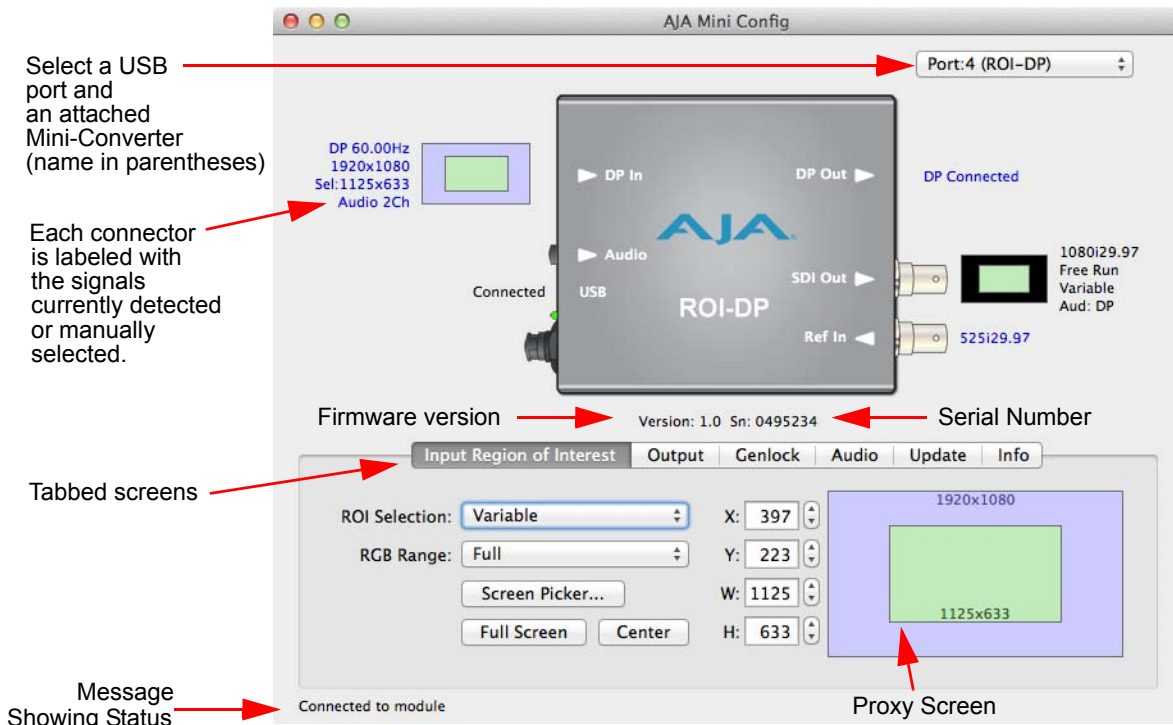

Selecting a Mini-Converter with the pulldown menu causes this application to connect to the selected converter. The graphic of Mini-Converter and text below it provides:

- Type of converter
- Firmware version
- Serial number of the unit.

A status field at the bottom of the screen shows if your application is connected and communicating with the Mini-Converter.

When configuring the Mini-Converter, select it from the top pulldown, view the current settings and change any values. Making a change communicates that new value to the Mini-Converter's non-volatile memory.

The Proxy Screen shows the current region of interest setting in green with the selection pixel size at the bottom and the input pixel size at the top.

Tabbed Screens


The Tabs delineate control screens with groups of controls for each type of task to be performed.

The controls for the actual configuration parameters are specific to each Mini-Converter type. Click on any of the tab buttons:

- Input Region of Interest
- Output
- Genlock
- Audio
- Update
- Info

The pane below the tabs will change to match your tab selection. Any changes you make will be saved, overwriting previous settings.

Input Region of Interest Tab Screen

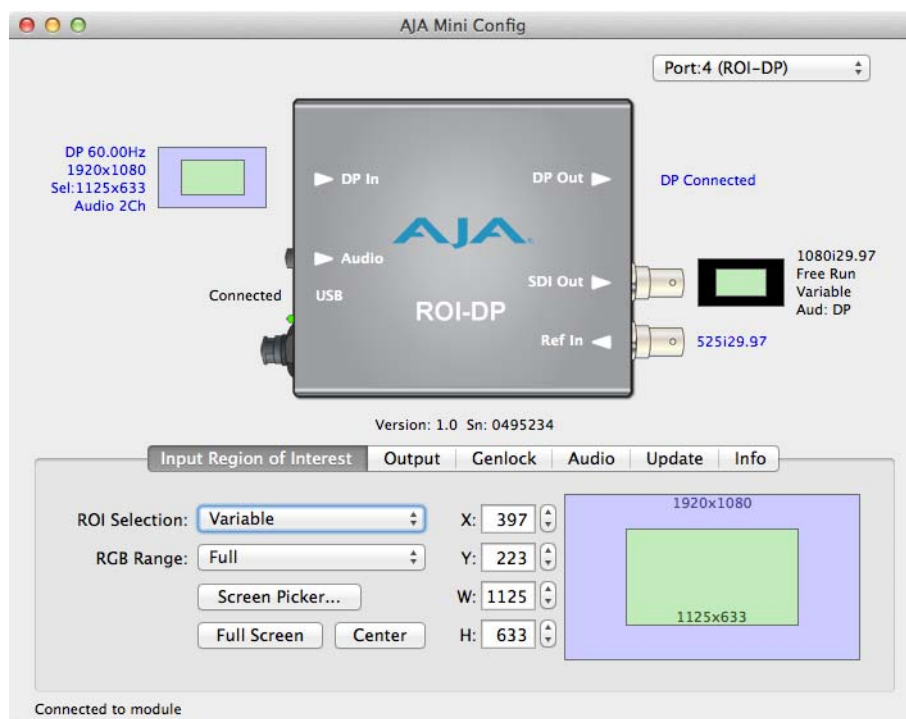

Click on the *Input Region of Interest* tab to view and make changes to the converter's input settings. Any changes made are immediately applied.

ROI Selection Using this pulldown menu you can choose a selection mode for *Input Region of Interest*:

- Auto: selects the entire DisplayPort signal detected at the input to the ROI-DP

- Variable: allows user-adjustable selection of all or a portion of the input signal
- *Fixed Aspect Ratio* or *Fixed Size* for common format standards

NOTE: MiniConfig provides a Tool-tip description for each mode.

Auto Selection Auto mode is the default setting. When it is active both the Input and SDI output are fixed in operation as described:

Auto: Scales the input region-of-interest as large as possible to fit into the SDI output region while maintaining the incoming aspect ratio. Matting may occur if the DisplayPort input's aspect ratio does not match the SDI out aspect ratio.

NOTE: Auto selections in the Input Region of Interest screen and the Output screen are linked. Selecting Auto from one screen will also select Auto in the other screen.

Variable Selection When you select *Variable* as the selection type, you can choose the region-of-interest selection size in three ways:


Variable: Allows user to select arbitrary sized region-of-interest with no constraints.

There are three ways to adjust region-of-interest:

- Use the X,Y coordinate and W,H (width, height) size fields. Within these fields, you can use your keyboard arrow keys to increment one pixel/line at a time for fine adjustment.
- Drag the edges of the image representation (green proxy screen) at the right of the selection pane.
- Use the Screen Picker button to produce a full-sized image with highlighted crop boundary box in the pass through monitor. Then drag the image sides to the desired locations. After defining the region-of-interest, press the Enter or Return key to exit Screen Picker mode. Refer to ["Typical ROI-DP Configurations" on page 8.](#)

NOTE: For Screen Picker operation, the resolution of the pass-through monitor MiniConfig is using must match the resolution of the DisplayPort input to the ROI-DP.

Figure 7. Screen Picker Cropping Overlay

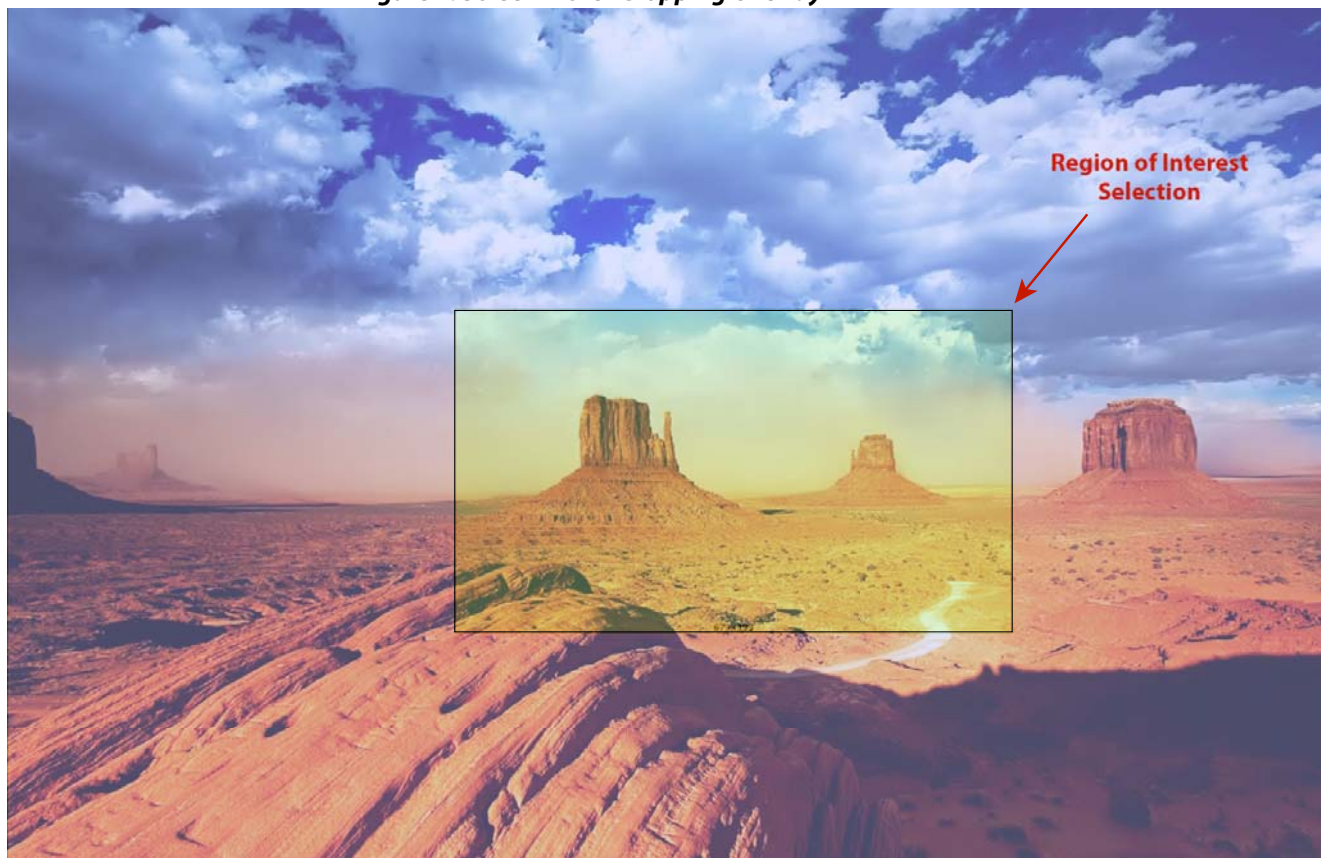

Click and Drag Options When using the drag method for picture placement or resizing, you may desire to use the Option/ALT and Shift keys for precise adjustments.

Option/ALT key: For more control, hold down the option/ALT key while dragging the image boundary. You will notice that the selection changes in a more gradual pixel-by-pixel manner regardless of your drag speed.

Shift key: You may change the image size while maintaining the current aspect ratio, by holding down the Shift key as you drag.

Arrow Keys: You may also use the keyboard arrows to increment size and placement of a variable region-of-interest selection one pixel at a time in X,Y,H,W fields and in the proxy and Screen Picker screens. (The up/down arrow keys can also be used to step through some menu selections.)

NOTE: The adjustments made on the green proxy screens and Screen Picker are live and can be viewed on the SDI output.

Fixed Aspect These selections offer a list of preset region-of-interest aspect ratio selections that are precise standards for SDI, DV, NTSC, PAL, and HD.

In this mode, the size of the selected region-of-interest can change but the aspect ratio is held constant.

Fixed Aspect - SDI Out: Forces region-of-interest to have the same aspect ratio as current SDI Out Format setting.

Fixed Aspect - DV: Forces region-of-interest to have the same aspect ratio as DV video.

Fixed Aspect - NTSC: Forces region-of-interest to have the same aspect ratio as NTSC video.

Fixed Aspect - PAL: Forces region-of-interest to have the same aspect ratio as PAL video (5:4)

Fixed Aspect - HD: Forces region-of-interest to have the same aspect ratio as HD video (16:9).

Fixed Size These selections enable you to choose a preset geometry that fills the SDI output with no scaling (size is not adjustable). In this mode, the region-of-interest selection can change position on the input screen but the size cannot be changed. These settings allow you to easily select standard video sizes for region-of-interest.

Fixed Size - SDI Out: Forces region-of-interest to have the same size as current SDI Out Format setting.

Fixed Size - DV: Forces region-of-interest to have the same size as DV video (720x480).

Fixed Size - NTSC: Forces region-of-interest to have the same size as NTSC video (720x486).

Fixed Size - PAL: Forces region-of-interest to have the same size as PAL video (720x576).

Fixed Size - 720HD: Forces region-of-interest to have the same size as 720HD video (1280x720).

Fixed Size - 1080HD: Forces region-of-interest to have the same size as 1080HD video (1920x1080).


RGB Range Menu The RGB Range pulldown menu allows you to select either Full range (0-1023) or SMPTE range (typically 64-940) for RGB color input.

Screen Picker Button When Variable region-of-interest selection is enabled, pressing the Screen Picker button activates Screen Picker mode. A full-sized image with highlighted crop boundary box is displayed in the pass through monitor (ROI-DP DisplayPort output). Adjust the region-of-interest boundaries and then press the Enter or Return key to exit Screen Picker mode.


Full Screen Button Click the Full Screen button to quickly set the region-of-interest to the full input raster size.

Center Button If you choose anything other than a full-sized image (Auto) in the ROI *Select* menu, you will have complete control of where the region of interest selection is placed. To quickly and precisely center the region-of-interest, click the Center button.

Output Tab Screen

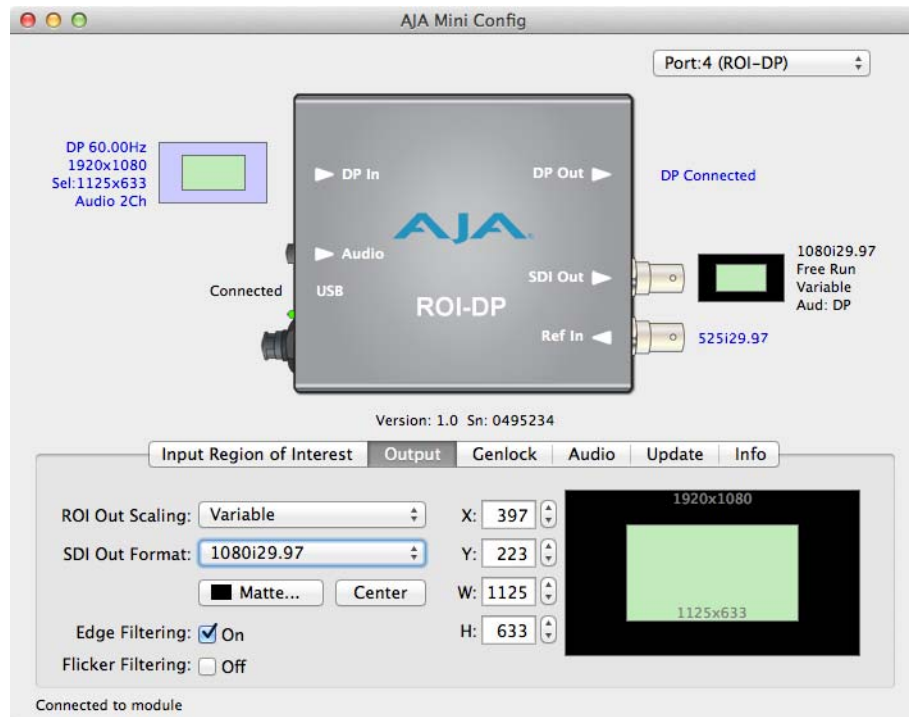

NOTE: Some sources can generate pixel clock rates that exceed the capabilities of the ROI-DP.

	<p>Caution!</p> <p>If the incoming video's pixel clock rate is too high, the ROI-DP will generate a full screen red matte on the SDI output to indicate this error condition. MiniConfig will also display an "Exceeds max rate" error message. A downstream DP monitor will still display the DP video. See page 19 for a potential solution.</p>
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Use the Output Tab to adjust the following parameters.

ROI Out Scaling Use the ROI Out Scaling pulldown menu to select one of the following:

Figure 8. ROI Out Scaling Menu



Auto: Automatically scales region-of-interest to maximum size with fixed aspect ratio defined by input format.

NOTE: Auto selections in the Output screen and the Input Region of Interest screen are linked. Selecting Auto from one screen will also select Auto in the other screen.

Fixed Aspect – Matte: Scales region-of-interest to maximum size to fit output region while maintaining aspect ratio. Matting may occur if input aspect ratio does not match output aspect ratio.

Full Screen: Scales region-of-interest to maximum size to fit output geometry. This may change aspect ratio of the image. No matting will occur.


None – Crop/Matte: No scaling occurs to region-of-interest. It is centered in output region using cropping or matting only.

Variable: Allows user to arbitrarily change position and scaling of region-of-interest as it is placed into the output region.

SDI Output Format The pulldown menu offers a full range of SDI Video Formats for output. For the complete list, see *“Output Formats” on page 23*. The format selection is reported in the MiniConfig graphic depicting the SDI Output.

Matte Background Click the Matte button to pull up the matte color panel that offers various modes of background color selection.

Figure 9. Matte Color Selection Panel

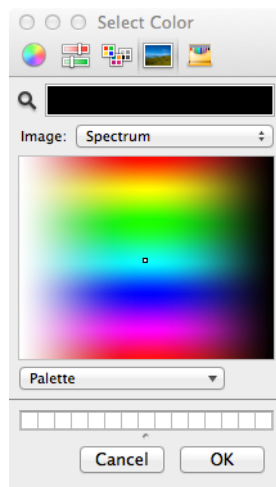


Center Button After a screen region-of-interest has been defined, to quickly center the image, click the Center button.

Edge Filtering Button You can disable edge filtering with this control. This is useful if you are using four ROI-DPs to drive a 4K monitor wall. Disabling edge filtering can eliminate the vertical line that would occur in that situation. Default setting is On.

Flicker Filtering Button You can enable flicker filtering with this control. This can be useful where vertical detail (horizontal lines) may strobe with the refresh rate of the display. Flicker filtering can help with interlaced outputs, and when a detailed image is scaled down into a smaller area. Default setting is Off.

Genlock Tab Screen

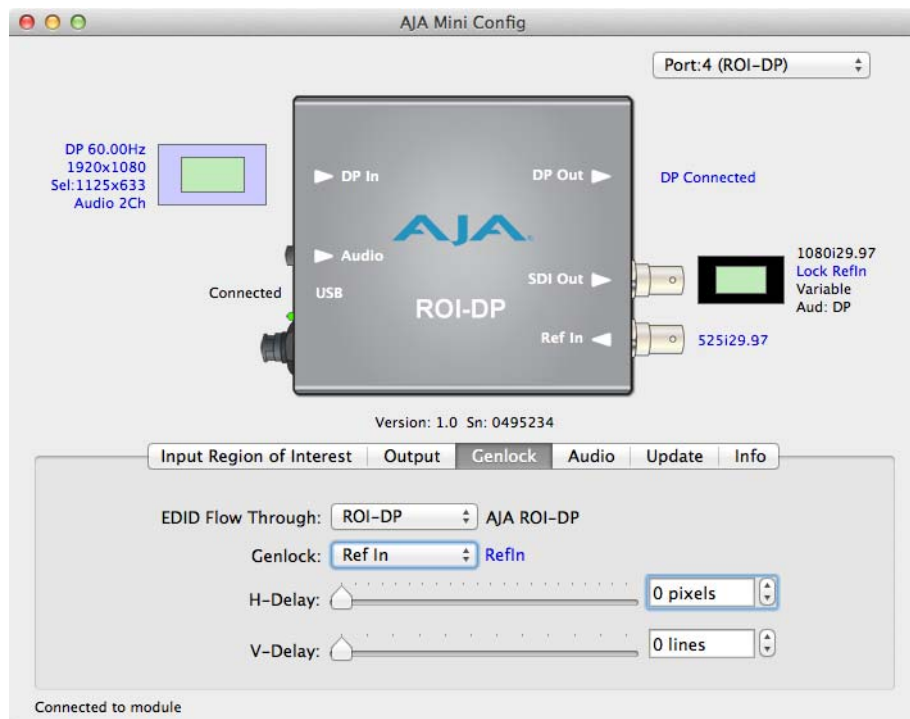

EDID Flow Through The EDID Flow Through setting selects what EDID (Extended Display Identification Data) is provided to the upstream source (i.e. a connected computer). EDID is used by the source to determine what resolution and format to output on the DisplayPort. You can select the EDID originating from the ROI-DP itself, or the EDID from a downstream device connected to the DP Out DisplayPort monitor connector.

- ROI-DP – The upstream source sees only the EDID of the ROI-DP.

NOTE: When a downstream DisplayPort sink device is connected to the DP Out connector, the DisplayPort source and sink could potentially negotiate a display format that is beyond the capability of ROI-DP's video processing circuitry. If this occurs, the SDI output will generate a red matte image. A possible solution to this situation is to select ROI-DP here, which replaces the downstream DisplayPort device's EDID with its own EDID. The source should then renegotiate a display format that is within the operating range of the ROI-DP.

- ROI-DP/Monitor – The upstream source sees the downstream device's EDID if a device is connected to the DP Out port, otherwise the source sees the EDID of the ROI-DP.

This control is useful if, for example, a 4K monitor is connected to the DP Out connector, in which case the pixel clock rate might be higher than the ROI-DP can tolerate. Choosing the "ROI-DP" EDID Flow Through setting can prevent that problem.

Genlock The Genlock tab offers the following options:

- Free-run – no reference lock
- Ref In – Lock to the Video Reference input


NOTE: The actual resultant Genlock status is reported to the right of the selection menu.

NOTE: If the reference signal is incompatible with the output format (for example, 1080i50 reference and 1080i 59.94 output) a message will be displayed at the bottom of the Genlock screen.

H- and V-Delay The controls let you adjust H and V delay from the sync input, by dragging the slider or entering values in the windows on the right. Horizontal delay is entered in pixels, while Vertical delay is entered in lines.

NOTE: H and V delay adjustments are only available when the SDI Out Format is compatible with the current sync input reference.

Audio Tab Screen

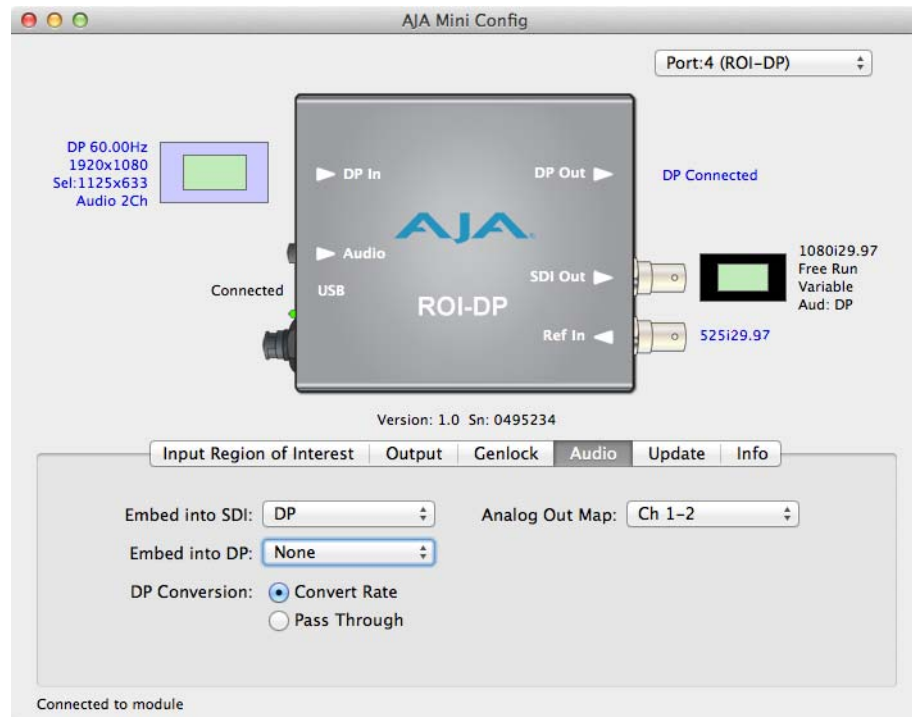

In default mode, ROI-DP passes the eight channels of embedded audio from the DisplayPort input to the SDI output and mutes embedded audio to the DP output.

Embed into SDI

DP: This selection passes DisplayPort incoming audio to the SDI output (up to 8 channels).

Analog: This selection passes only the Analog audio input for inclusion into the SDI audio stream. In this case, you can use the *Analog Out Map* pulldown menu to select the specific channel pair you want to carry the signal.

Analog + DP: This selection causes the Analog audio input to replace one pair of the DisplayPort audio channels on the SDI output. The analog audio is inserted on the channels defined by the Analog Out Map pulldown.

None: No audio is output (mute) on the SDI output.

Embed into DP


None: No audio is output (mute) on the DP output.

DP: This selection passes the DisplayPort incoming audio to the DisplayPort output (up to 8 channels).

DP Conversion The *Convert Rate* button enables ROI-DP to convert incoming DisplayPort audio between 32 kHz to 96 kHz to 48 kHz (the SDI native audio standard). If you don't want to convert, choose *Pass Through*.

Analog Out Map This control selects which two SDI embedded audio channels receive the incoming L R analog audio when Embed into SDI is set to *Analog* or *Analog + DP*. Choose from *Ch 1-2*, *Ch 3-4*, *Ch 5-6*, or *Ch 7-8*.

Update Tab Screen

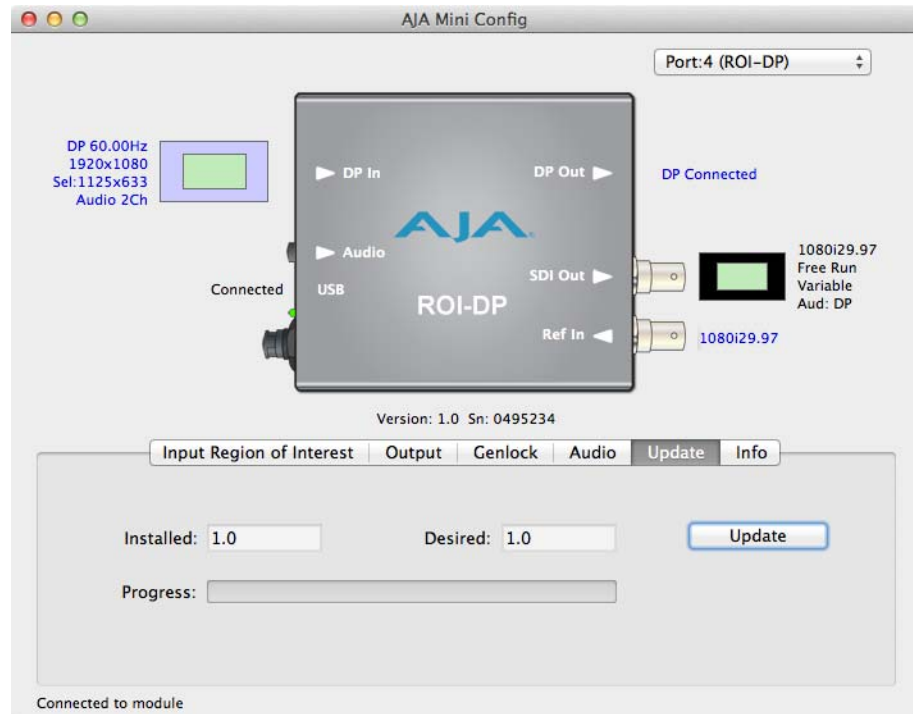

Use this Update screen to install new software on the converter.

NOTE: When discussing Mini-Converters, “Firmware” is software that will be stored in the Mini-Converter’s non-volatile memory and used when it is powered up. This is something different than the MiniConfig application software. The version numbers shown in the Update screen refer only to the firmware.

Installed: This field shows the version of the firmware currently installed inside the Mini-Converter.

Desired: This field shows the version of firmware embedded in the MiniConfig application which you can install into the Mini-Converter by clicking the *Update* button.

Update: This button initiates a software update operation loading the “Desired” version of firmware into the Mini-Converter’s non-volatile memory.

Progress: This indicator bar shows the progress of software being installed.

Software Update Procedure


1. Check the AJA website for new MiniConfig software for your Mini-Converter. If new software is found, download it and uncompress the file archive (zip). Here is the URL to use when checking:

<http://www.aja.com/en/products/mini-converters/mini-config-software>

NOTE: During Mini-Converter software update, only one Mini-Converter should be connected to the computer. Disconnect the USB cables of any other AJA Mini-Converters.

2. Connect the Mini-Converter to be updated to a Mac or PC via a USB port on the computer and run the new MiniConfig software just downloaded.
3. Click on the Update tab screen.
4. Check the Installed version level against the Desired version level. If the Desired is newer, then click the *Update* button to download the new firmware to the Mini-Converter; progress will be shown via the “Progress” thermometer bar.

Info Tab Screen

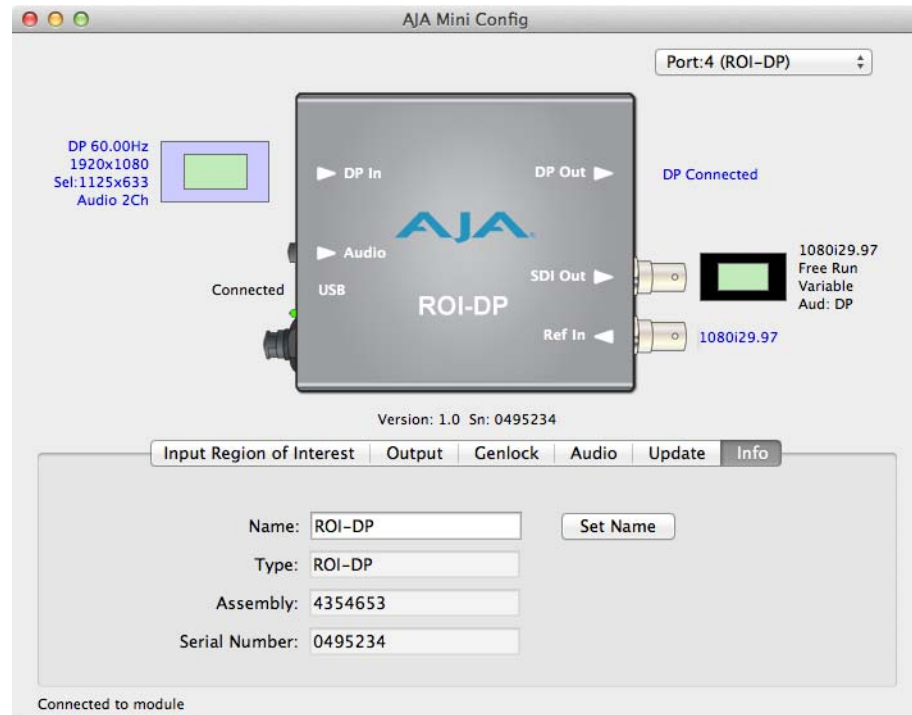

This screen provides basic information about the Mini-Converter. This information is mostly useful when calling AJA Support for service or technical support.

Name: This field allows you to give your Mini-Converter a name. This may be useful if you have several Mini-Converters attached to a Mac/PC via USB so you can distinguish one of them easily (especially if they’re the same model).

Type: This is the factory set model name of the Mini-Converter.

Assembly: This is the factory assembly number.

Serial Number: This is the factory set unique serial number of your unit. If you ever call AJA Support for service, you may be asked for this number.

Appendix A: Specifications

Video Input

- 1 x DisplayPort input connector

Input Formats

- Computer Signals:*
- WUXGA (1920x1200) 60 Hz max
 - VGA (640x480) minimum

NOTE: Frame rates limited by the 167MHz max rate of the DP Receiver.

- Video Signals:*
- 1920x1080i 25, 29.97
 - 1920x1080p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
 - 1280x720p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
 - 525i, 625i
 - 480p, 580p

Color Range

- Full
- SMPTE

Reference Input

Permissible reference video inputs include:

- NTSC 525 Bi-level Sync
- PAL 625 Bi-level Sync
- 720p Tri-level Sync
- 1080i Tri-level Sync
- 1080p Tri-level Sync

Video Output

DisplayPort:

- 1 x DisplayPort pass through connector

SDI:

- 3G-SDI, SMPTE-259/292/424, 1 x BNC

Output Formats

- HD**
- 1920x1080i 25, 29.97
 - 1920x1080p 50, 59.94, 60 - SMPTE 425-1 Level A Mapping structure 1 (4:2:2 10-bit YCbCr)
 - 1920x1080p 23.98, 24, 25, 29.97, 30
 - 1280x720p 50, 59.94, 60

- SD**
 - 525i 29.97
 - 625i 25
- HDCP**
 - ROI-DP does not encode the DisplayPort output with HDCP encryption.
 - ROI-DP does not accept HDCP input.

Audio Inputs

- 1 x Analog 3.5mm TRS connector, 2-channel
- DisplayPort embedded audio, 24-bit, 8-channel

Audio Output

- SDI embedded audio, 24-bit, 2-channel or 8-channel
- DisplayPort embedded audio, 24-bit, 8-channel

User Controls

- USB port used with supplied cable and MiniConfig software application to configure device via Mac or Windows

Physical

Power

- +5 to 20V DC regulated, 9 watts max
- AJA external power supply model DWP-U-R1 (included):
 - 100-240V, 50/60Hz universal input

Size

- 5.765" x 4.020" x 0.9" (146.431mm x 102.108mm x 22.86mm)

Environment

Operating Temperature: 0 to 40 degrees C (32 to 104 degrees F)

Operating Relative Humidity: 10-90% non-condensing

Operating Altitude: <3,000 meters (<10,000 feet)

Safe Storage Temperature (Power OFF): • -40 to 60 degrees C (-40 to 140 d

Appendix B: Safety & Compliance

Federal Communications Commission (FCC) Compliance Notices

Class B Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15, Subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian ICES Statement

Canadian Department of Communications Radio Interference Regulations

This digital apparatus does not exceed the Class B limits for radio-noise emissions from a digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique respecte les limites de bruits radioélectriques visant les appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada. Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

European Union and European Free Trade Association (EFTA) Regulatory Compliance

This equipment may be operated in the countries that comprise the member countries of the European Union and the European Free Trade Association. These countries, listed in the following paragraph, are referred to as The European Community throughout this document:

AUSTRIA, BELGIUM, BULGARIA, CYPRUS, CZECH REPUBLIC, DENMARK, ESTONIA, FINLAND, FRANCE, GERMANY, GREECE, HUNGARY, IRELAND, ITALY, LATVIA, LITHUANIA, LUXEMBOURG, MALTA, NETHERLANDS, POLAND, PORTUGAL, ROMANIA, SLOVAKIA, SLOVENIA, SPAIN, SWEDEN, UNITED KINGDOM, ICELAND, LICHTENSTEIN, NORWAY, SWITZERLAND

Declaration of Conformity

Marking by this symbol indicates compliance with the Essential Requirements of the EMC Directive of the European Union 2004/108/EC.



This equipment meets the following conformance standards:

Safety: EN 60065: 2002 + A1: 2006 + A11: 2008 + A2: 2010 + A12: 2011 (GS License)

IEC 60065: 2001 + A1: 2005 + A2: 2010 (CB Scheme Report/Certificate)

Additional licenses issued for specific countries available on request.

Emissions: EN 55103-1: 2009, CISPR 22: 2008, EN 55022: 2010, EN 61000-3-2: 2009, EN 61000-3-3:2008


Environments: E2, E3 and E4

Immunity: EN 55103-2: 2009, EN 61000-4-2:2009, EN 61000-4-3:2010, EN 61000-4-4:2010, EN 61000-4-5:2005, EN 61000-4-6:2009 , EN 61000-4-11:2004

Environments: E2, E3 and E4

The product is also licensed for additional country specific standards as required for the International Marketplace.

Recycling Notice

	<p>This symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.</p>
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Warning!**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung! Dieses ist ein Gerät der Funkstörgrenzwertklasse B. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention! Ceci est un produit de Classe B. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

Korea KCC Compliance Statement

B급 기기
(가정용 방송통신기자재)

이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

Class B
(Broadcasting Communication
Equipment for Home Use)

As an electromagnetic wave equipment for home use (Class B), this equipment is intended to use mainly for home use and may be used in all areas.

Taiwan Compliance Statement

This is a Class B product based on the standard of the Bureau of Standards, Metrology and Inspection (BSMI) CNS 13438, Class B.

Japanese Compliance Statement

2. Class B ITE

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

This is a Class B product based on the standard of the VCCI Council. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

Translated Warning and Caution Messages

The following caution statements, warning conventions, and warning messages apply to this product and manual.



Warning Symbol



Caution Symbol

Before Operation Please Read These Instructions



Warning!

Read and follow all warning notices and instructions marked on the product or included in the documentation.

Avertissement ! Lisez et conformez-vous à tous les avis et instructions d'avertissement indiqués sur le produit ou dans la documentation.

Warnung! Lesen und befolgen Sie die Warnhinweise und Anweisungen, die auf dem Produkt angebracht oder in der Dokumentation enthalten sind.

¡Advertencia! Lea y siga todas las instrucciones y advertencias marcadas en el producto o incluidas en la documentación.

Aviso! Leia e siga todos os avisos e instruções assinalados no produto ou incluídos na documentação.

Avviso! Leggere e seguire tutti gli avvisi e le istruzioni presenti sul prodotto o inclusi nella documentazione.



Warning!

Do not use this device near water and clean only with a dry cloth.

Avertissement! N'utilisez pas cet appareil près de l'eau et nettoyez-le seulement avec un tissu sec..

Warnung! Das Gerät nicht in der Nähe von Wasser verwenden und nur mit einem trockenen Tuch säubern.

¡Advertencia! No utilice este dispositivo cerca del agua y límpielo solamente con un paño seco.

Aviso! Não utilize este dispositivo perto da água e limpe-o somente com um pano seco.

Avviso! Non utilizzare questo dispositivo vicino all'acqua e pulirlo soltanto con un panno asciutto.

**Warning!**

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Avertissement ! Ne bloquez aucune ouverture de ventilation. Suivez les instructions du fabricant lors de l'installation.

Warnung! Die Lüftungsöffnungen dürfen nicht blockiert werden. Nur gemäß den Anweisungen des Herstellers installieren.

¡Advertencia! No bloquee ninguna de las aberturas de la ventilación. Instale de acuerdo con las instrucciones del fabricante.

Aviso! Não obstrua nenhuma das aberturas de ventilação. Instale de acordo com as instruções do fabricante.

Avviso! Non ostruire le aperture di ventilazione. Installare in conformità con le istruzioni del fornitore.

**Warning!**

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Avertissement ! N'installez pas l'appareil près d'une source de chaleur telle que des radiateurs, des bouches d'air de chauffage, des fourneaux ou d'autres appareils (amplificateurs compris) qui produisent de la chaleur.

Warnung! Nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizregistern, Öfen oder anderen Wärme erzeugenden Geräten (einschließlich Verstärkern) aufstellen.

¡Advertencia! No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas u otros aparatos (incluidos amplificadores) que generan calor.

Aviso! Não instale perto de nenhuma fonte de calor tal como radiadores, saídas de calor, fogões ou outros aparelhos (incluindo amplificadores) que produzam calor.

Avviso! Non installare vicino a fonti di calore come termosifoni, diffusori di aria calda, stufe o altri apparecchi (amplificatori compresi) che emettono calore.

**Warning!**

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Avertissement! La sécurité de la prise polarisée ou de la prise de type mise à la terre ne doit en aucun cas être empêchée de fonctionner. Une prise polarisée a deux broches, l'une étant plus large que l'autre. Une prise de type mise à la terre a deux broches et une troisième broche pour la mise à la terre. La broche large ou la troisième broche sont fournies pour votre sécurité. Si la prise fournie ne s'insère pas dans votre prise femelle, consultez un électricien pour le remplacement de la prise femelle obsolète.

Warnung! Der Sicherheitszweck des gepolten bzw. Schukosteckers ist zu berücksichtigen. Ein gepolter Stecker verfügt über zwei Pole, von denen einer breiter als der andere ist. Ein Schukostecker verfügt neben den zwei Polen noch über einen dritten Pol zur Erdung. Der breite Pol bzw. der Erdungspol dienen der Sicherheit. Wenn der zur Verfügung gestellte Stecker nicht in Ihren Anschluss passt, konsultieren Sie einen Elektriker, um den veralteten Anschluss zu ersetzen.

¡Advertencia! No eche por tierra la finalidad del tipo de enchufe polarizado con conexión a tierra. Un enchufe polarizado tiene dos espigas, una más ancha que la otra. Un enchufe con conexión a tierra tiene dos espigas iguales y una tercera espiga que sirve para la conexión a tierra. La espiga ancha, o la tercera espiga, sirven para su seguridad. Si el enchufe suministrado no encaja en el tomacorriente, consulte con un electricista para reemplazar el tomacorriente obsoleto.

Aviso! Não anule a finalidade da segurança da ficha polarizada ou do tipo ligação terra. Uma ficha polarizada tem duas lâminas sendo uma mais larga do que a outra. Uma ficha do tipo de ligação à terra tem duas lâminas e um terceiro terminal de ligação à terra. A lâmina larga ou o terceiro terminal são fornecidos para sua segurança. Se a ficha fornecida não couber na sua tomada, consulte um electricista para a substituição da tomada obsoleta.

Avviso! Non compromettere la sicurezza della spina polarizzata o con messa a terra. Una spina polarizzata ha due spinotti, di cui uno più largo. Una spina con messa a terra ha due spinotti e un terzo polo per la messa a terra. Lo spinotto largo o il terzo polo sono forniti per motivi di sicurezza. Se la spina fornita non si inserisce nella presa di corrente, contattare un elettricista per la sostituzione della presa obsoleta.

**Warning!**

Since the Mains plug is used as the disconnection for the device, it must remain readily accessible and operable.

Avertissement! Puisque la prise principale est utilisée pour débrancher l'appareil, elle doit rester aisément accessible et fonctionnelle.

Warnung! Da der Netzstecker als Trennvorrichtung dient, muss er stets zugänglich und funktionsfähig sein.

¡Advertencia! Puesto que el enchufe de la red eléctrica se utiliza como dispositivo de desconexión, debe seguir siendo fácilmente accesible y operable.

Aviso! Dado que a ficha principal é utilizada como a desconexão para o dispositivo, esta deve manter-se prontamente acessível e funcional.

Avviso! Poiché il cavo di alimentazione viene usato come dispositivo di sconnessione, deve rimanere prontamente accessibile e operabile.

**Warning!**

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.

Avertissement! Protégez le cordon d'alimentation pour que l'on ne marche pas dessus ou qu'on le pince, en particulier au niveau des prises mâles, des réceptacles de convenance, et à l'endroit où il sort de l'appareil.

Warnung! Vermeiden Sie, dass auf das Netzkabel getreten oder das Kabel geknickt wird, insbesondere an den Steckern, den Steckdosen und am Kabelausgang am Gerät.

¡Advertencia! Proteja el cable de energía para que no se le pise ni apriete, en especial cerca del enchufe, los receptáculos de conveniencia y el punto del que salen del equipo.

Aviso! Proteja o cabo de alimentação de ser pisado ou de ser comprimido particularmente nas fichas, em tomadas de parede de conveniência e no ponto de onde sai do dispositivo.

Avviso! Proteggere il cavo di alimentazione in modo che nessuno ci cammini sopra e che non venga schiacciato soprattutto in corrispondenza delle spine e del punto in cui esce dal dispositivo.

**Warning!**

Unplug this device during lightning storms or when unused for long periods of time.

Avertissement! Débranchez cet appareil pendant les orages avec éclairso s'il est inutilisé pendant de longues périodes.

Warnung! Das Gerät ist bei Gewitterstürmen oder wenn es über lange Zeiträume ungenutzt bleibt vom Netz zu trennen.

¡Advertencia! Desenchufe este dispositivo durante tormentas eléctricas o cuando no se lo utilice por largos periodos del tiempo.

Aviso! Desconecte este dispositivo da tomada durante trovoadas ou quando não é utilizado durante longos períodos de tempo.

Avviso! Utilizzare soltanto i collegamenti e gli accessori specificati e/o venduti dal produttore, quali il treppiedi e l'esoscheletro.

**Warning!**

Do not open the chassis. There are no user-serviceable parts inside. Opening the chassis will void the warranty unless performed by an AJA service center or licensed facility.

Avertissement! Ne pas ouvrir le châssis. Aucun élément à l'intérieur du châssis ne peut être réparé par l'utilisateur. La garantie sera annulée si le châssis est ouvert par toute autre personne qu'un technicien d'un centre de service ou d'un établissement agréé AJA.

Warnung! Öffnen Sie das Gehäuse nicht. Keine der Geräteteile können vom Benutzer gewartet werden. Durch das Öffnen des Gehäuses wird die Garantie hinfällig, es sei denn, solche Wartungsarbeiten werden in einem AJA-Service-Center oder einem lizenzierten Betrieb vorgenommen.

¡Advertencia! No abra el chasis. El interior no contiene piezas reparables por el usuario. El abrir el chasis anulará la garantía a menos que se lo haga en un centro de servicio AJA o en un local autorizado.

Advertência! Não abra o chassi. Não há internamente nenhuma peça que permita manutenção pelo usuário. Abrir o chassi anula a garantia, a menos que a abertura seja realizada por uma central de serviços da AJA ou por um local autorizado.

Avvertenza! Non aprire lo chassis. All'interno non ci sono parti riparabili dall'utente. L'apertura dello chassis invaliderà la garanzia se non viene effettuata da un centro ufficiale o autorizzato AJA.

**Warning!**

This device is a Class B product. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

Attention! Le périphérique est un produit de Classe B. Le fonctionnement de cet équipement dans une zone résidentielle risque de causer des interférences nuisibles, auquel cas l'utilisateur devra y remédier à ses propres frais.

Achtung! Dies ist ein Gerät der Klasse B. Bei Einsatz des Geräts in Wohngebieten kann es Störungen des Radio- und Fernsehempfangs verursachen. In diesem Fall muss der Benutzer alle notwendigen Maßnahmen ergreifen, die möglicherweise nötig sind, um die Störungen auf eigene Rechnung zu beheben.

¡Precaución! Este es un producto clase B. El uso de este equipo en áreas residenciales puede causar interferencias nocivas, en cuyo caso, se requerirá que los usuarios tomen cualquier medida necesaria para corregir la interferencia por cuenta propia.

Cuidado! Este dispositivo é um produto Classe B. Operar este equipamento em uma área residencial provavelmente causará interferência prejudicial; neste caso, esperase que os usuários tomem as medidas necessárias para corrigir a interferência por sua própria conta.

Attenzione! Questo dispositivo è un prodotto di Classe B. Il funzionamento di questo apparecchio in aree residenziali potrebbe causare interferenze dannose, nel cui caso agli utenti verrà richiesto di adottare tutte le misure necessarie per porre rimedio alle interferenze a proprie spese..

**Warning!**

Disconnect the external AC power supply line cord(s) from the mains power before moving the unit.

Avertissement ! Retirez le ou les cordons d'alimentation en CA de la source d'alimentation principale lorsque vous déplacez l'appareil.

Warnung! Trennen Sie die Wechselstrom-Versorgungskabel vom Netzstrom, bevor Sie das Gerät verschieben.

¡Advertencia! Cuando mueva la unidad desenchufe de la red eléctrica el/los cable(s) de la fuente de alimentación CA tipo brick.

Advertência! Remova os cabos CA de alimentação brick da rede elétrica ao mover a unidade.

Avvertenza! Scollegare il cavo dell'alimentatore quando si sposta l'unità.

**Warning!**

Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Avertissement ! Référez-vous au personnel de service qualifié pour tout entretien. L'entretien est exigé quand l'appareil a été endommagé de quelque manière que ce soit, par exemple lorsque le cordon d'alimentation ou la prise sont endommagés, que du liquide a été versé ou des objets sont tombés dans l'appareil, que l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou est tombé.

Warnung! Das Gerät sollte nur von qualifizierten Fachkräften gewartet werden. Eine Wartung ist fällig, wenn das Gerät in irgendeiner Weise beschädigt wurde, wie bei beschädigtem Netzkabel oder Netzstecker, falls Flüssigkeiten oder Objekte in das Gerät gelangen, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht ordnungsgemäß funktioniert oder fallen gelassen wurde.

¡Advertencia! Consulte al personal calificado por cuestiones de reparación. El servicio de reparación se requiere cuando el dispositivo ha recibido cualquier tipo de daño, por ejemplo cable o espigas dañadas, se ha derramado líquido o se han caído objetos dentro del dispositivo, el dispositivo ha sido expuesto a la lluvia o humedad, o no funciona de modo normal, o se ha caído.

Aviso! Remeta todos os serviços de manutenção para o pessoal de assistência qualificado. A prestação de serviços de manutenção é exigida quando o dispositivo foi danificado mediante qualquer forma, como um cabo de alimentação ou ficha que se encontra danificado/a, quando foi derramado líquido ou caíram objectos sobre o dispositivo, quando o dispositivo foi exposto à chuva ou à humidade, quando não funciona normalmente ou quando foi deixado cair.

Avviso! Fare riferimento al personale qualificato per tutti gli interventi di assistenza. L'assistenza è necessaria quando il dispositivo è stato danneggiato in qualche modo, ad esempio se il cavo di alimentazione o la spina sono danneggiati, è stato rovesciato del liquido è stato rovesciato o qualche oggetto è caduto nel dispositivo, il dispositivo è stato esposto a pioggia o umidità, non funziona correttamente o è caduto.

Warranty Information

Limited Warranty

AJA Video Systems, Inc. (AJA Video) warrants that this product will be free from defects in materials and workmanship for a period of five years from the date of purchase. If a product proves to be defective during this warranty period, AJA Video, at its option, will either repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, you the Customer, must notify AJA Video of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. The Customer shall be responsible for packaging and shipping the defective product to a designated service center nominated by AJA Video, with shipping charges prepaid. AJA Video shall pay for the return of the product to the Customer if the shipment is to a location within the country in which the AJA Video service center is located. Customer shall be responsible for paying all shipping charges, insurance, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. AJA Video shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than AJA Video representatives to install, repair or service the product, b) to repair damage resulting from improper use or connection to incompatible equipment, c) to repair any damage or malfunction caused by the use of non-AJA Video parts or supplies, or d) to service a product that has been modified or integrated with other products when the effect of such a modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY AJA VIDEO IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. AJA VIDEO AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. AJA VIDEO'S RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE WHOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER AJA VIDEO OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Index

A

Audio Screen *20*
Auto Selection *14*

B

Block Diagram *7*

C

Center Button *16, 18*

E

Edge Filtering Button *18*
EDID Flow Through *19*
Embed into SDI *20*
Exceeds max rate error message *6, 17*

F

Features *6*
Flicker Filtering Button *18*
Full Screen Button *16*

G

Genlock Screen *19*

H

H- and V-Delay *20*
HDCP Protection *5*

I

I/O Connections *7*
Info Screen *22*
Input Region of Interest Screen *13*
Installation Overview *9*

M

Matte Background *18*
MiniConfig
 Installation on Mac *10*
 Installation on PC *10*
 Operation *11*
 Running Multiple Converters *12*
 Screen Description *12*
 Startup *11*
MiniConfig Overview *6*
MiniConfig Screen
 Audio *20*
 Genlock *19*
 Info *22*
 Input Region of Interest *13*
 Output *17*
 Update *21*

O

Output Screen *17*
Overview *5*

P

Pixel Clock Rate Limitation *6*

R

Red SDI Output *6, 17*
RGB Range Menu *16*
ROI Output Scaling
 Output Scaling *17*
ROI Selection *13*
 Click and Drag Options *15*
ROI-DP Configurations *8*
ROI-DP Features *6*
ROI-DP Overview *5*

S

Screen Picker
 Use *14*
Screen Picker Button *16*
SDI Output Format *18*
Software Update Procedure *21*
Specifications *23*
System Interconnect Diagrams *8*

U

Update Screen *21*

V

Variable Selection *14*