


OG-12GM

12G-SDI MUX/DEMUX

openGear Card

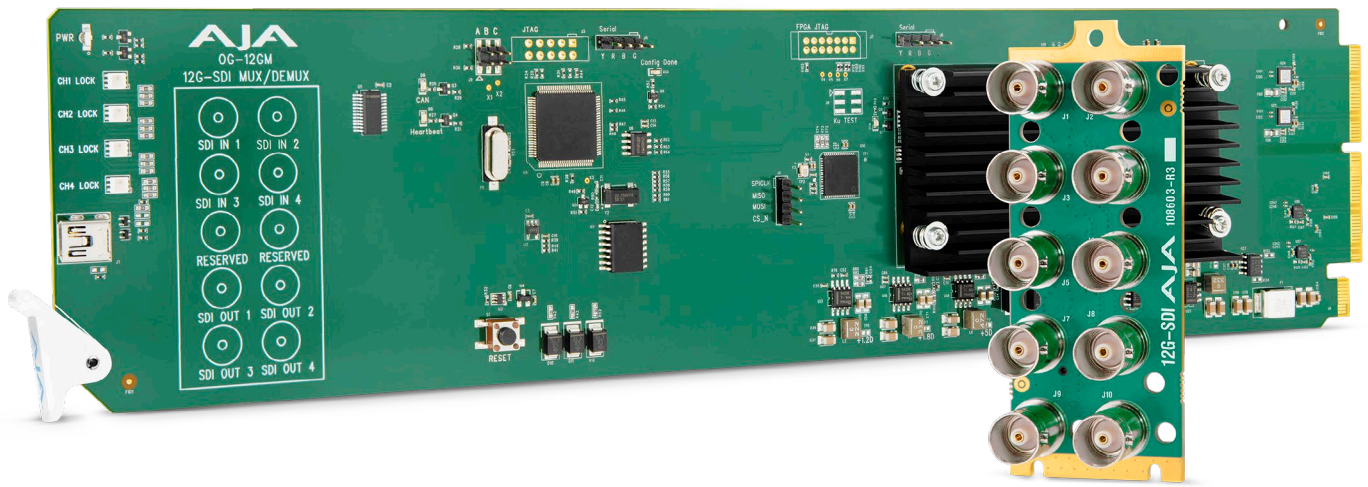

Installation and Operation Guide

Version 1.6
Published March 5, 2024



Notices

Trademarks

AJA® and Because it matters.® are registered trademarks of AJA Video Systems, Inc. for use with most AJA products. AJA™ is a trademark of AJA Video Systems, Inc. for use with recorder, router, software and camera products. Because it matters.™ is a trademark of AJA Video Systems, Inc. for use with camera products.

Corvid Ultra®, Io®, Ki Pro®, KONA®, KUMO®, ROI® and T-Tap® are registered trademarks of AJA Video Systems, Inc.

AJA Control Room™, KiStor™, Science of the Beautiful™, TruScale™, V2Analog™ and V2Digital™ are trademarks of AJA Video Systems, Inc.

All other trademarks are the property of their respective owners.

Copyright

Copyright © 2024 AJA Video Systems, Inc. All rights reserved. All information in this manual is subject to change without notice. No part of the document may be reproduced or transmitted in any form, or by any means, electronic or mechanical, including photocopying or recording, without the express written permission of AJA Video Systems, Inc.

Contacting AJA Technical Support or Sales

Please have all pertinent information at hand prior to contacting AJA support or sales.

Support Telephone: +1.530.271.3190

Support Website: <https://www.aja.com/support/contact>

Support Email: support@aja.com

Sales Email: sales@aja.com


Shipping Address: AJA Video Systems
180 Litton Drive
Grass Valley, CA 95945, USA

Contents

Notices	2
Trademarks	2
Copyright	2
Contacting AJA Technical Support or Sales	2
Chapter 1 – Introduction	5
Card Overview	5
Features	5
DashBoard for openGear	6
OG-12GM Simplified Block Diagram	6
I/O Connections for OG-12GM	6
LED Indicators	6
Signal Indicators in the DashBoard Control System	7
User Controls	8
openGear and AJA	8
DashBoard Control System	9
Installation	9
Summary	9
Unpacking	9
OG-12GM Rear Card Installation	9
OG-12GM Front Card Installation	10
Cabling	12
Chapter 2 – Operation	13
Using the DashBoard Control System	13
Requirements	13
Configuration Settings Stored in OG Card	13
DashBoard Control Interface Basic Components	13
Basic Tree View of Frames and Cards	14
Parameter Controls	14
Card Information and Status	14
Status Tab Screen	16
Input Detail Tab Screen	17
Timing Tab Screen	17
Output Detail Tab Screen	18
Input Tab Screen	19
Input SDI	20
Input Mapping	20
Video Format	21
Bit Depth	21
Non-PCM Audio Processing	21
Unsupported Non-PCM Audio	21
Output Tab Screen	21
Output SDI	22
Output Mapping	23
3G-SDI Mode	23
Bit Depth	24
DA Function	24
P to PsF	24
Frame Rate	25
HDR Metadata Tab Screen	25
Output Overrides	26
Setup Tab Screen	27
Uploading New Software	27
Rebooting	29

Appendix A – Specifications30
Appendix B – Safety and Compliance35
Warranty and Liability Information44
Software License Agreement45
Index.48

Chapter 1 – Introduction

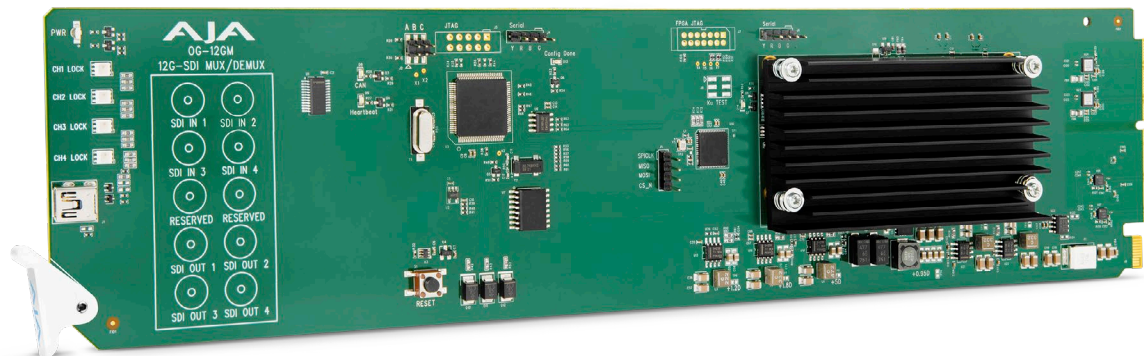

Card Overview

The OG-12GM is a compact SDI transport openGear card that enables 12G-SDI to quad-link 3G-SDI and quad-link 3G-SDI to 12G-SDI conversion. The muxer/demuxer supports 4K, UltraHD, 2K, HD and SD workflows and conversions from quad-link SDI signals to single link SDI signals, and vice versa at 12G, 6G, 3G and 1.5G bit rates. Both Square Division (Quadrant) and Two Sample Interleave (2SI) input and output mappings are supported.

AJA openGear products are designed for use in high density openGear 2RU frames including AJA's OG-X-FR frame, with industry standard DashBoard software support on Windows®, macOS® and Linux®, offering remote control and monitoring over a PC or local network.

Features

- Supports multiple types of Quad, Dual, and Single link conversions
- Two Sample Interleave (2SI) to/from Square Division (Quadrant) pixel mapping
- 3G-SDI Level A to/from 3G-SDI Level B Dual Link (DL)
- 3G-B Dual Stream Support
- Simple Frame Rate Conversion (FRC) between Fractional or Integer rates
- HDR signaling metadata pass-through and optional override
- Pass-through of Single Link 12G, 6G, 3G, 1.5G and 270M SDI video
- Embedded audio pass-through of AC-3 (Dolby Digital) and E-AC-3 (Dolby Digital Plus) compressed audio, including DD+ Atmos (aka DD+ JOC)
- Configurable as a 1x4 Distribution Amplifier
- Input signal diagnostics and timing analyzer for Quad and Dual link signals
- Automatic or manual control
- Detailed timing analysis for validating alignment of quad-link SDI inputs
- Passes SDI embedded audio, 24-bit, up to 16-Channels
- Recognizes and transmits High Dynamic Range (HDR) and Wide Color Gamut (WCG) signaling on VPID
- Remote Ethernet configuration through Ross DashBoard software
- Hot-swappable


- Rear I/O card included
- Two slots required for each card
- openGear compatible card
- Compatible with OG-X-FR and OG-3-FR openGear frames
- Five year warranty

DashBoard for openGear

DashBoard by Ross Video is used to work with openGear cards and frames. Use DashBoard as part of the configuration process of OG-12GM during setup of the system integration.


OG-12GM Simplified Block Diagram

Figure 1. OG-12GM Block Diagram

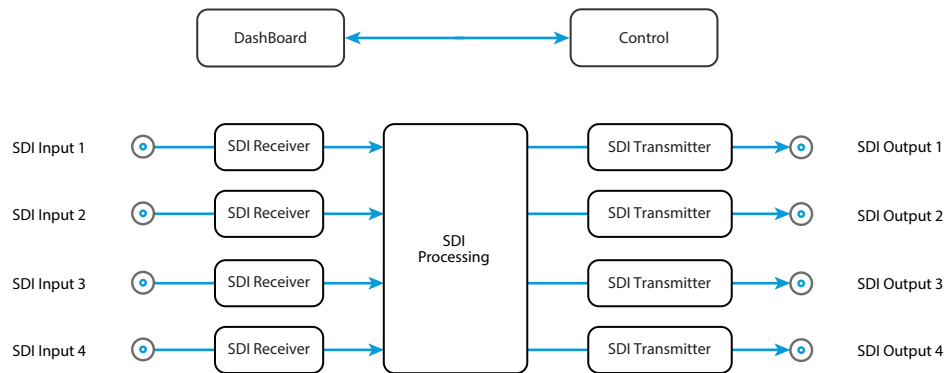

I/O Connections for OG-12GM

Figure 2. Rear View of OG-12GM Card Connectors

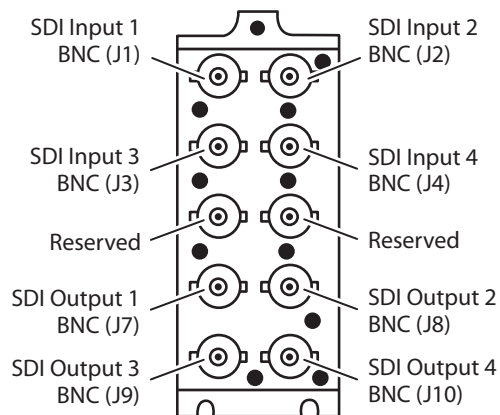

LED Indicators

LEDs on the front (near door) of the card indicate the presence of power and the type of signal detected on the SDI inputs as follows (from top to bottom):

Power LED

The Power LED indicates the state of the card as displayed in DashBoard. When power is present, it can be green, yellow or red.

- Green: no DashBoard card state alarm is present.
- Yellow: a yellow DashBoard card state alarm is present. See DashBoard for more information.
- Red: a red DashBoard card state alarm is present. See DashBoard for more information.

CH1 LOCK, CH2 LOCK, CH3 LOCK, CH4 LOCK

The LEDs adjacent to each SDI input channel label indicate by color the detected signal type:

- Off: no signal
- Green: SD
- Red: HD
- Amber: 3G
- Purple: 6G
- Blue: 12G


Signal Indicators in the DashBoard Control System

Card Alarm State – Red

When the card is connected to an incompatible rear card, or when the card is not inserted fully, it will result in a red alarm indicator:

- HW Status Unsupported Rear Module

Figure 3. Card Alarm State Red

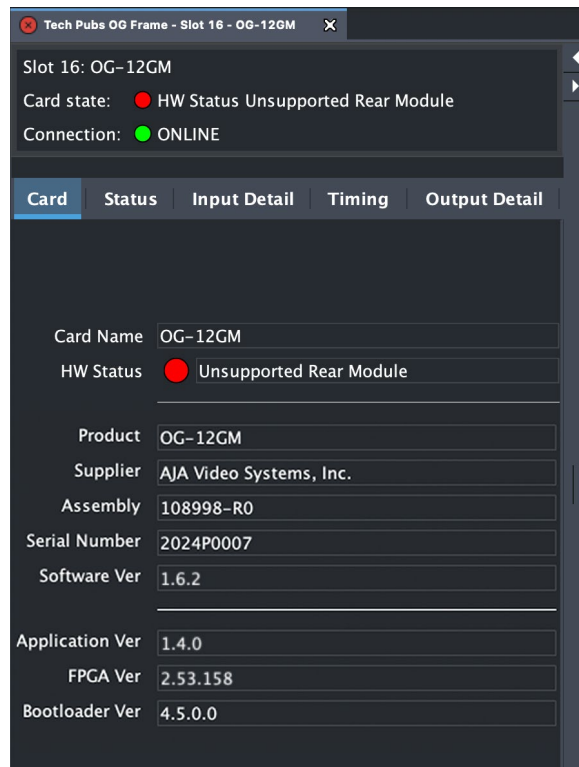


IMPORTANT: A common reason for this error message to occur is that the card has not been fully inserted. When inserting the card, there will be an initial click and it may seem like the card is fully inserted. However, you need to push the card into the frame a little bit harder until you hear or feel a second click.

Card Alarm State – Green

When there is a valid input signal detected, the DashBoard Control System shows a green Card State.

Figure 4. Signal Is Present and Locked

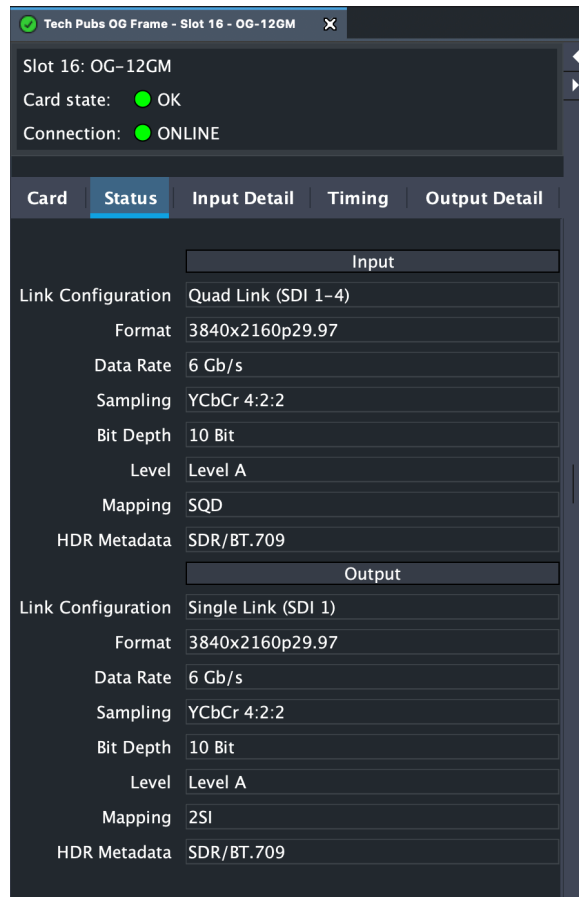

User Controls

The essential user controls for the OG-12GM consist of two components—an openGear 2RU frame, and the DashBoard Control System.

openGear and AJA

openGear is an open-architecture, modular frame system designed by Ross Video and supported by a diverse range of terminal equipment manufacturers, including AJA. Ross Video manufactures the frames, power supplies and network cards for openGear. AJA is a reseller of the openGear frames.

AJA Video is a leading manufacturer of video interface technologies, converters, digital video recording solutions and professional cameras, bringing high-quality, cost-effective products to the professional, broadcast and post-production markets. AJA products, including openGear cards, are designed and manufactured at our facilities in Grass Valley, California.

DashBoard Control System

The DashBoard Control System, created by Ross Video, provides a control interface between Windows, macOS and Linux computers and the cards installed in an openGear frame. DashBoard operates through TCP/IP communication and requires an Ethernet connection between the controlling computer and an openGear frame.

Use DashBoard to select the Mux/Demux link configuration settings.

For details about acquiring and using the DashBoard Control System, refer to ["Using the DashBoard Control System" on page 13.](#)

Installation

Summary

NOTE: Use with openGear OG-3-FR and OG-X-FR 2RU frames. DFR-8321 frame is not supported.

Installing an OG-12GM card into an OG-X-FR openGear frame consists of the following steps:

- Install the rear card onto the back of the frame corresponding to the slot pair you will be using for the OG-12GM card.
- Insert the OG-12GM card into the frame in the right (even numbered) slot of the pair.
- Connect the BNC cabling to the rear card.



ESD Susceptibility - Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas, and when wearing synthetic fiber clothing. Always exercise proper grounding precautions when working on circuit boards and related equipment.

Unpacking

Unpack each openGear product you received from the shipping container and ensure that all items are included. If any items are missing or damaged, contact your sales representative or AJA directly.

Parts List

Quantity	Description
1	OG-12GM Front Card in ESD bag
1	12G 10 BNC Rear Card

OG-12GM Rear Card Installation


1. Ensure that the frame is properly installed.
2. Locate the card frame slot on the rear of the openGear frame into which you wish to install the openGear card.

NOTE: An OG-12GM card occupies two slots in the frame.

3. Using a Phillips screwdriver, unscrew the top screw from the desired blank plate and remove the blank plate.


4. Seat the bottom of the rear card in the seating slot at the base of the frame backplane.

Figure 5. Rear Card Inserting into Frame Seating Slot

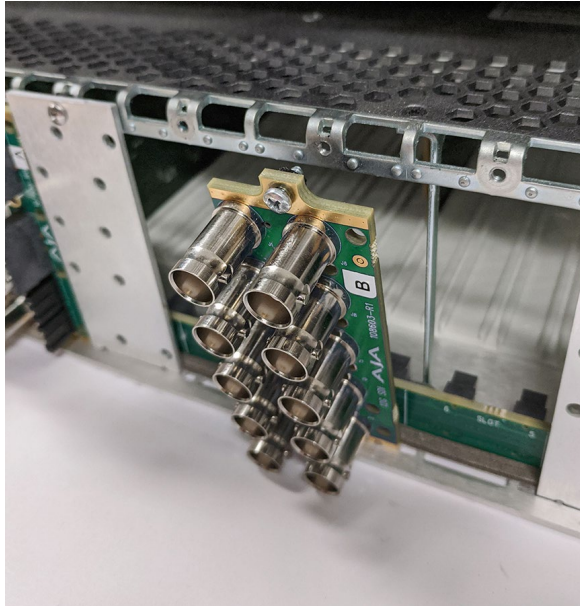

5. Align the top screw of the rear card with the screw hole on the top edge of the frame backplane.
6. Ensure the rear card aligns with the desired card slot before tightening the screw.
7. Using a Phillips screwdriver, fasten the rear card to the frame backplane. Do not over tighten.

Figure 6. Rear Card Inserted into Frame Seating Slot

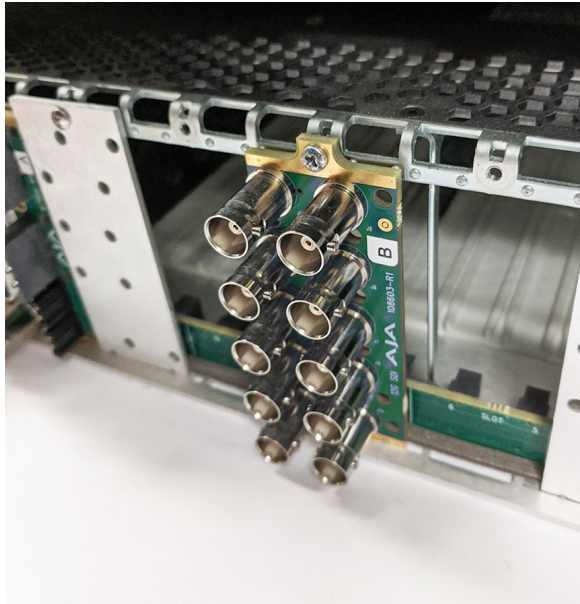

8. Ensure proper frame cooling and ventilation by having all rear frame slots covered with rear cards or blank plates if plates are not pre-installed.

OG-12GM Front Card Installation

1. Open the openGear frame door as follows:

- A. Gently pull the side door tabs towards the center of the door, releasing the door from the frame.
- B. Using both hands, pull the door towards you. The door extender arms prevent the door from falling.
2. Locate the rear card you installed as described above. The interior slot number is dependent on the slot combinations into which you installed the rear card. This allows adequate spacing to avoid damaging the card, the cards installed in the neighboring slots, or both.
3. Hold the card by the edges and carefully align the card edges with the rails inside the frame. The slots are numbered starting from the left-most slot when facing the frame front.

IMPORTANT: OG-12GM cards are installed into the right (even numbered) slot of the pair in order to connect with the rear panel.


4. Fully insert the card into the frame until the card is properly seated in the rear card. There are two stages to inserting the card:
 - A. After you feel the card's first click, its position in the frame will resemble the photograph below in [Figure 7](#).
 - B. Next, press against the white plastic tab again until you feel the second click. The card's position will resemble the photograph below in [Figure 8](#).

NOTE: Some cards require more pressure than others to be fully inserted. Make sure that the plastic tab at the bottom of the front edge of the card is completely upright. If it is tilting forward, the card is not yet fully inserted.

Figure 7. Two OG Cards Inserted into the Frame



Figure 8. Properly Inserted Cards with Locked Plastic Tabs

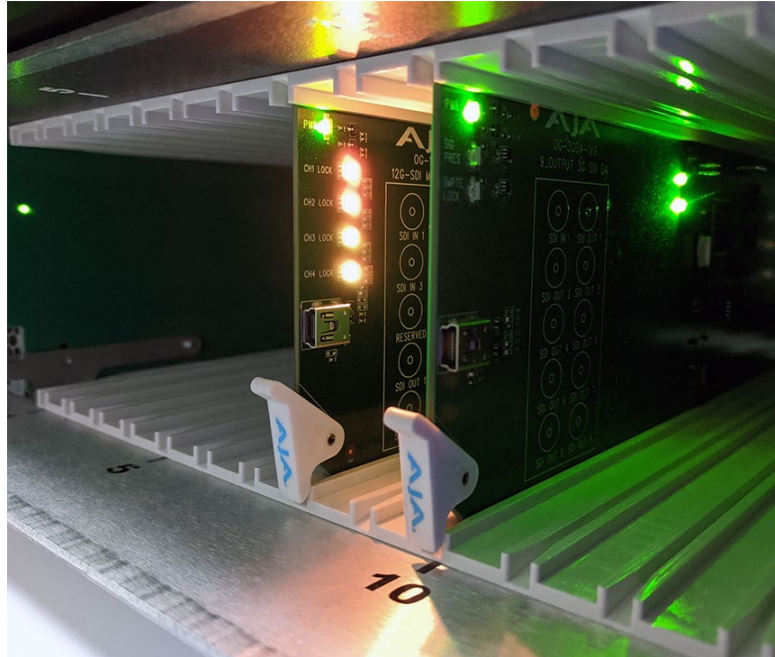

5. Close the frame door as follows:
 - A. Slide the door into the frame.
 - B. Pull and release the door tabs to ensure the frame door is securely locked to the frame.

Cabling

Refer to [Figure 2 on page 6](#) to identify the input and output signal connectors.

Chapter 2 – Operation

Using the DashBoard Control System

The DashBoard Control System is available as a free download from the openGear DashBoard Software Download webpage:

<https://www.rossvideo.com/support/software-downloads/dashboard/>

Ross Video offers comprehensive documentation that covers the extensive capabilities of the DashBoard Control System:

<https://www.rossvideo.com/support/product-documentation/dashboard/>

This AJA OG-12GM manual addresses only those essential aspects of the DashBoard Control System needed to control the OG-12GM card.

Requirements

Use the latest available version of DashBoard.

The DashBoard Control System requires the following components:

- openGear frame with a Frame Controller card
- Ethernet connection between the controlling computer and the openGear frame

NOTE: The openGear frame ships from AJA with the MFC-8322-S Frame Controller card for controlling the new AJA DashBoard cards. The openGear frame also supports the MFC-OGX-N Advanced Networking Frame Controller card, which can be used to control compatible OG cards.

DashBoard automatically discovers openGear and DashBoard Connect devices, such as openGear frames and cards that are present and accessible on your network.


Configuration Settings Stored in OG Card

Configuration settings made through DashBoard are stored in the OG-12GM unit through subsequent power cycles.

DashBoard Control Interface Basic Components

The basic components of the DashBoard Control System user interface consist of the basic tree view of frames and cards, the card information and status panel, and the parameter controls panel. These elements are shown below.

Figure 9. Main Sections of the DashBoard User Interface

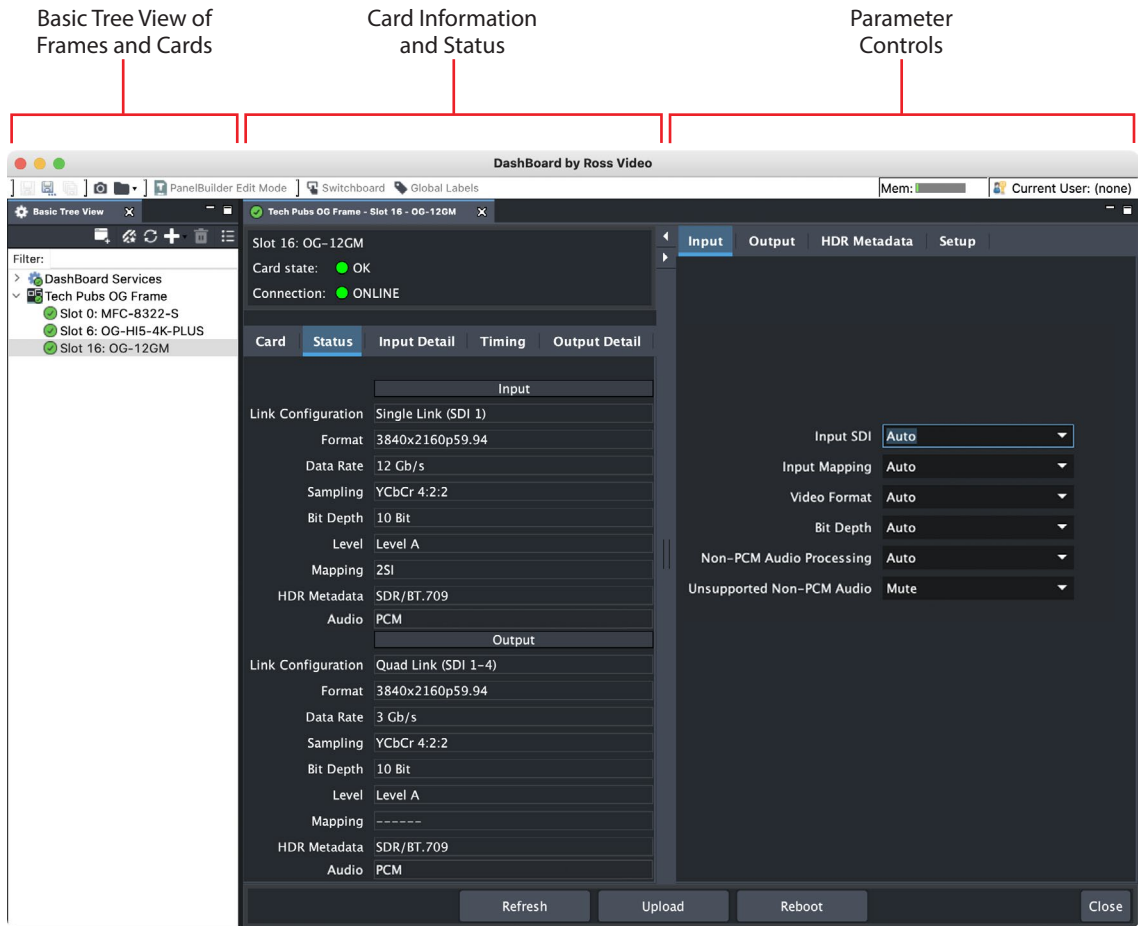

Basic Tree View of Frames and Cards

The basic tree view in the left column shows the frames and cards that are discoverable by DashBoard on your network.

Parameter Controls


The parameter controls panel on the right side of DashBoard shows the tabs and parameters that are configurable for the selected card. The white fields indicate that they can be written to, or modified.

Card Information and Status

The card information and status panel, shown in the middle panel, display the basic status of the card currently selected in DashBoard. The yellow fields in this panel indicate that they are read-only.

Card Information Screen.

Figure 10. OG-12GM Card Information Screen in DashBoard

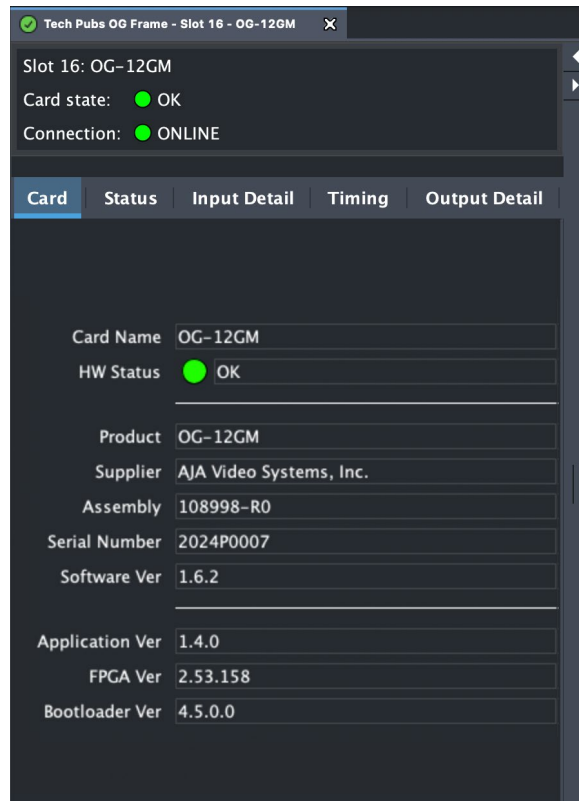

The Card information screen indicates the basic information about the card itself such as the card name, hardware status, serial number, software version and other items.

Card Name - This field reports that OG card's name, which you can define with the Setup Tab Screen.

Assembly - This is the factory assembly number.

NOTE: Some newly manufactured openGear cards may not be backwards compatible with older firmware and DashBoard versions. It is highly recommended that you update the firmware to avoid any potential issues. Please check the current Release Notes to confirm that the Assembly number is compatible with any older firmware or DashBoard versions.


Serial Number - This is the factory set unique serial number of your OG card. If you ever call AJA Support for service, you may be asked for this number.

Software Ver - This shows the currently installed firmware for that OG card.

Status Tab Screen

The Status tab screen indicates the status of key aspects of Input and Output signal presence such as Link Configuration, Format, Data Rate, Sampling, Bit Depth, Level, Audio Format, and Mapping.


Figure 11. Status Tab Screen in DashBoard

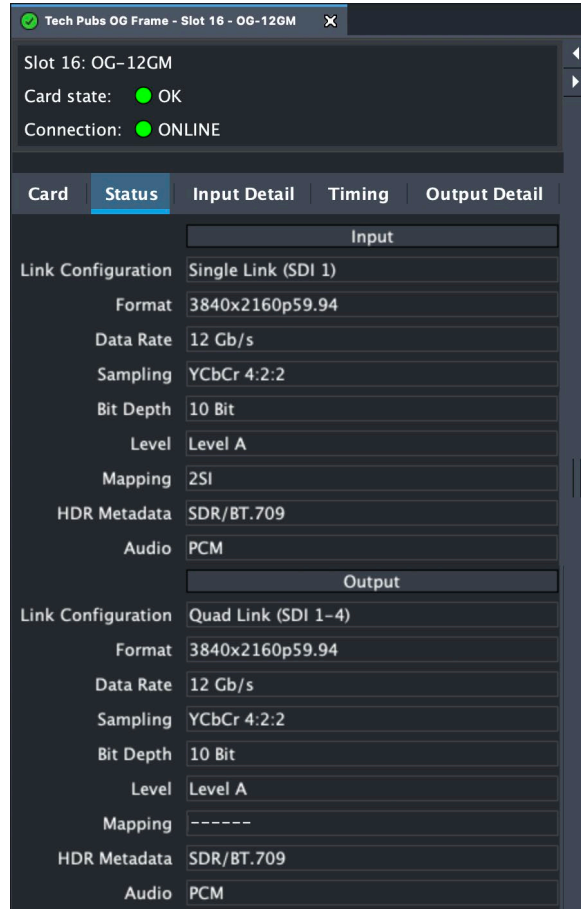

Input Detail Tab Screen

Click on the Input Detail tab to view detailed input signal diagnostic information. This can be useful for trouble-shooting and debugging. Input details detected include Status, Standard, Scan Type, Frame Rate, Data Rate, Level, Sampling, Bit Depth, and Mapping for each input BNC.

Figure 12. Input Detail Tab Screen with Single 12G-SDI Input

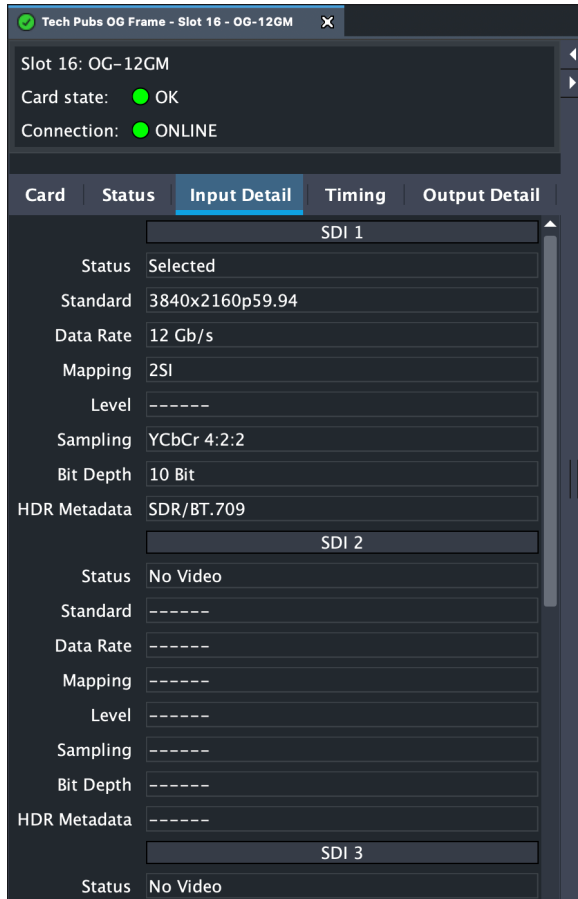

Timing Tab Screen


The purpose of the Timing Tab Screen is to validate that all four links of a Quad Link input signal meet the required 400ns link-to-link timing, and if not, which link(s) are not meeting this specification.

The Timing Tab Screen measures timing differences link to link, but displays timing values relative to SDI 1 for ease of understanding and correcting timing issues. The Timing analyzer has a measurement range of +/- 1/2 frame.

The Pixels row indicates any horizontal offset in terms of pixels for each link, while the Pixels Time information indicates the horizontal offset in terms of microseconds. These two rows display the same information represented in different terms (pixels versus microseconds). The pixel information (pixels and pixel time) indicates offset of up to 1 line. If the offset exceeds 1 line, then the line count is incremented.

The Total row displays each link's total offset (vertical timing plus horizontal offset) in terms of time.


Figure 13. Timing Tab Screen with Quad 3G-SDI to Single 12G-SDI conversion

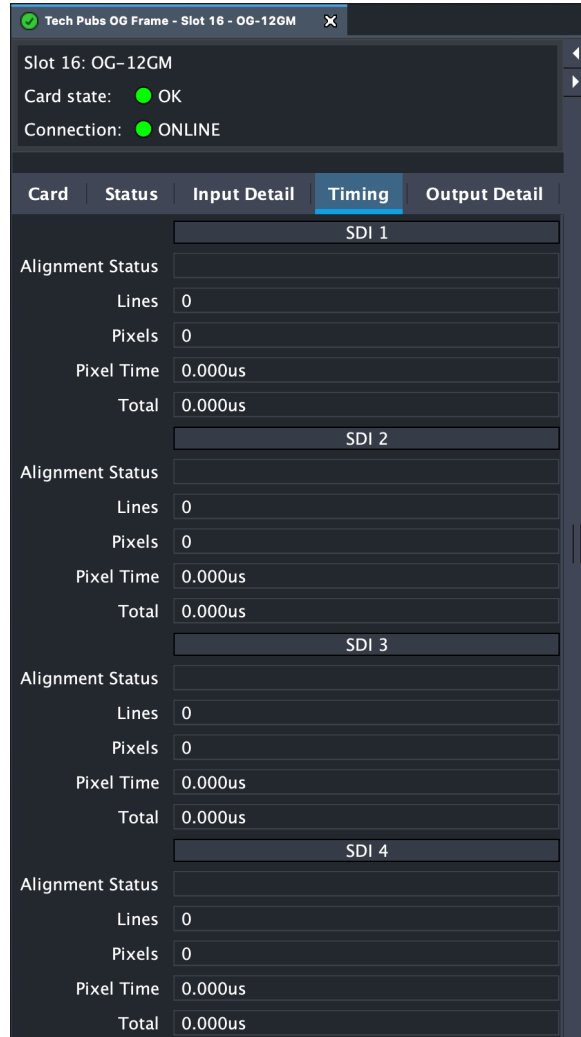

Output Detail Tab Screen

Click on the Output Detail tab to view detailed output signal diagnostic information. This can be useful for trouble-shooting and debugging. Output signal details include Status, Standard, Scan Type, Frame Rate, Data Rate, Level, Sampling, Bit Depth, and Mapping for each output BNC.


Figure 14. Output Detail Tab Screen with Quad 3G-SDI to Single 12G-SDI conversion

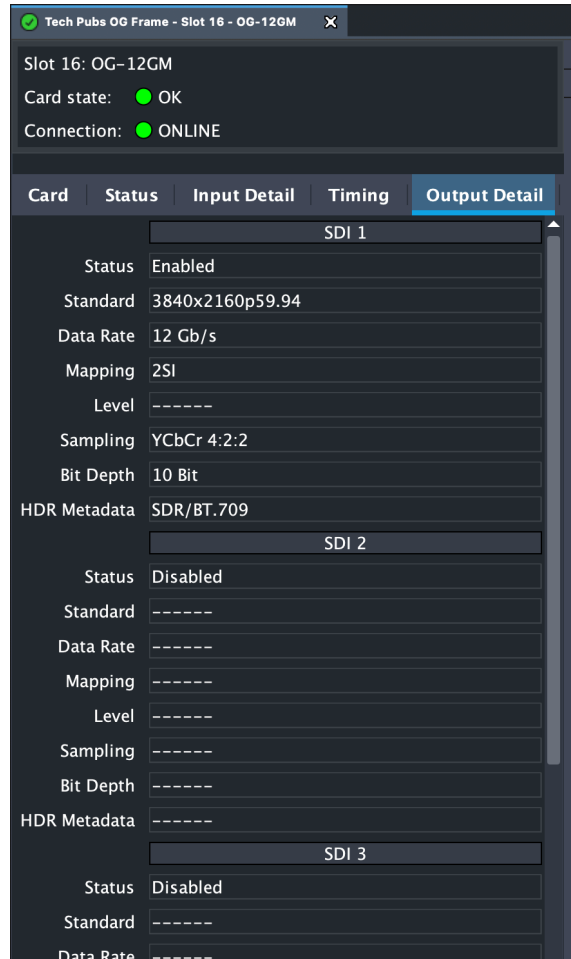

Input Tab Screen

Click on the Input tab to view and make changes to the converter's input settings.

Figure 15. Input Tab Screen in Dashboard

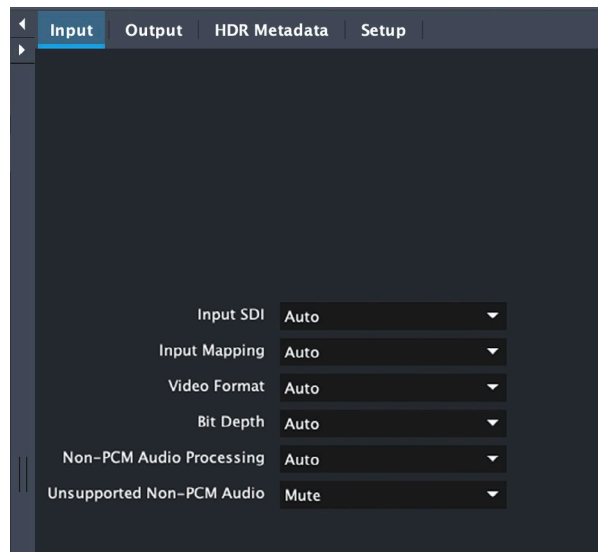

Input SDI

Selects the input link configuration. Choose from the following:

Auto - Automatically selects the link configuration based on the detected input video parameters. To the right of the drop-down menu, the status display reflects the current Input SDI behavior.

In order for "Auto" to select Quad Link (SDI 1-4), all four inputs must match in terms of data rate, link mapping, raster, frame rate, scan type, sampling, bit depth, pixel mapping, and range (SMPTE/Full).

Single Link (SDI 1) - Select this option if you have a Single Link UltraHD/4K signal coming in through SDI In 1.

Single Link (SDI 2) - Select this option if you have a Single Link UltraHD/4K signal coming in through SDI In 2.

Single Link (SDI 3) - Select this option if you have a Single Link UltraHD/4K signal coming in through SDI In 3.

Single Link (SDI 4) - Select this option if you have a Single Link UltraHD/4K signal coming in through SDI In 4.

Dual Link 1.5G (SDI 1-2) - Select this option if you have Dual Link 1.5G signal coming in through SDI In 1-2.

Dual Link 3G/6G (SDI 1-2) - Select this option if you have Dual Link 3G/6G signal coming in through SDI In 1-2.

Quad Link (SDI 1-4) - Select this option if you have a Quad Link UltraHD/4K signal coming in through SDI In 1-4.

Dual Stream (SDI 1-2) - Select this option if you have two independent Low Frame Rate (LFR) rasters and want to, for example, multiplex them together for a Dual Link output that can be carried on a 3GB-Dual Stream. The two input rasters must be locked together.

Data Stream A (SDI 1) - Select this option if you have 3GB-Dual Stream input and want to extract Data Stream A (first raster) and send to an output.

Data Stream B (SDI 1) - Select this option if you have 3GB-Dual Stream input and want to extract Data Stream B (second raster) and send to an output.

Data Stream A+B (SDI 1) - Select this option if you have 3GB-Dual Stream input and want to extract both Data Streams and send to individual outputs.

Input Mapping

NOTE: Input pixel mapping applies only to 4K/UltraHD signals being transported on Quad Link 4 x 3G inputs, as 6G and 12G SDI are always Two Sample Interleave (2SI), and Quad Link 1.5G SDI is always Square Division (Quadrant).

For 4K/UltraHD signals using Quad Link 3Gbps transport, the Video Payload Identifier (VPID) embedded in each link indicates whether the pixel mapping is 2SI or not. If 2SI is not indicated, the OG-12GM assumes that the input signal is mapped Square Division (Quadrant). Note that there are no specific VPID bits to indicate Square Division (Quadrant).

Use the Input Mapping control to select the input mapping. Choose from the following:

Auto - Analyzes details of each input. The VPID from each input signal indicates whether its pixel mapping is Two Sample Interleave (2SI) or Square Division (Quadrant).

In order for "Auto" to select 2SI pixel mapping, the video input (whether single link 6G-SDI or 12G-SDI, or Quad Link 3G-SDI) must indicate 2SI with its embedded VPID(s).

2SI - Select this option if you are inputting a Two Sample Interleave (2SI) pixel mapped signal.

SQD - Select this option if you are inputting a Square Division (Quadrant) pixel mapped signal.

Video Format

This control can be used to force the OG-12GM's input video receiver to interpret that incoming video signal as either Interlaced, Progressive, or PsF (Progressive Segmented Frame). The default setting is Auto, in which the OG-12GM examines the incoming video signal to determine which format is appropriate.

Choose from Auto, Interlaced, Progressive, or PsF.

Auto - Automatically selects the format based on the input video parameters and the payload ID.

Interlaced - Forces the OG-12GM to interpret the incoming video as Interlaced.

Progressive - Forces the OG-12GM to interpret the incoming video as Progressive.

PsF - Forces the OG-12GM to interpret the incoming video as PsF.

Under normal circumstances, you should always run in Auto mode. However, because Interlaced and PsF formats are essentially the same signal, the OG-12GM might confuse them. For example, if you know for sure that you are receiving a PsF signal, but the OG-12GM is interpreting it as an Interlaced signal while running in Auto mode, setting this control to PsF will force the receiver to interpret that signal as PsF. However, if the OG-12GM is receiving a Progressive signal and you force it to interpret it as Interlaced, an invalid output video signal will be created.

Bit Depth

Selects the input video bit depth. Choose Auto, 10-bit, or 12-bit. Choosing "Auto" automatically selects the bit depth based on the input video parameters and the payload ID.

Non-PCM Audio Processing

This control is used to specify the processing mode for non-pcm audio. Default is Auto (non-pcm audio will be processed) or Off (non-pcm audio will not be processed). Audio format is indicated in the Status tab.


Unsupported Non-PCM Audio

This control is used to specify behavior if unsupported non-pcm audio is detected. Default is Mute (unsupported non-pcm audio is not passed to output) or Pass (unsupported non-pcm audio is passed to output). Audio format is indicated in the Status tab.

Output Tab Screen

Click on the Output tab to view and make changes to the converter's output settings.

Figure 16. Output Tab Screen with Quad 3G-SDI to Single 12G-SDI conversion

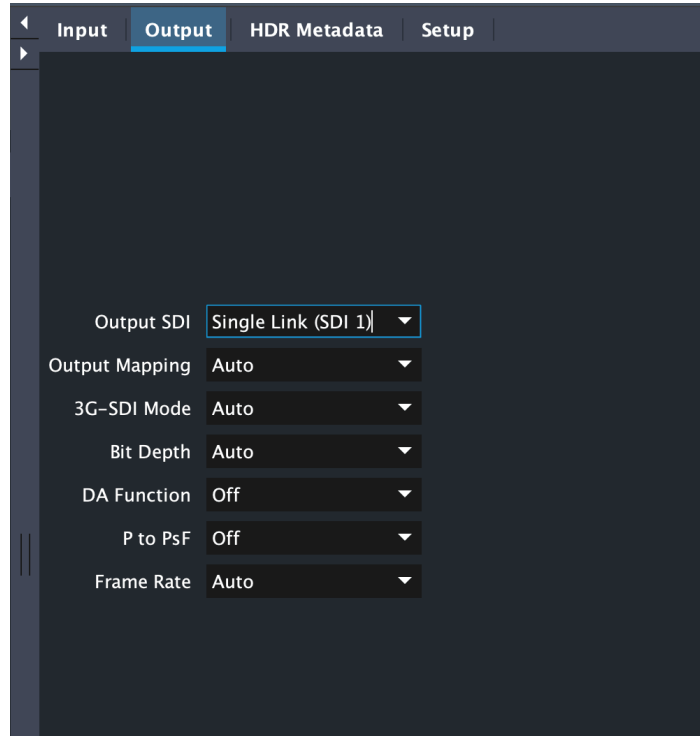

Output SDI

Auto - Automatically selects the output link configuration based on the inputs detected.

- If Quad Link UltraHD/4K (SDI 1-4) is detected on the input, the output will auto-select to a Single Link (SDI 1) multiplex output.
- If Dual Link UltraHD/4K (SDI 1-2) is detected on the input, the output will auto-select to a Single Link (SDI 1) multiplex output.
- If Single Link UltraHD/4K (SDI 1) is detected on the input, the output will auto-select to a Quad Link (SDI 1-4) to demux the signal to four outputs using SDI Outputs 1-4.
- If Dual Link HD is detected on the input, the output will auto-select to a Single Link (SDI 1) multiplex output.
- If 3GB-DS (Dual Stream) is detected on the input and both data streams are selected, two outputs will be created with data stream A on SDI Out 1 and data stream B on SDI Out 2.

Single Link (SDI 1) - Causes the OG-12GM to use only SDI Output 1. The combination of input and output settings determines whether the OG-12GM is muxing, demuxing or passing through.

Dual Link (SDI 1-2) - Causes the OG-12GM to use SDI Outputs 1-2, if possible. The combination of input and output settings determines whether the OG-12GM is muxing, demuxing or passing through.

Quad Link (SDI 1-4) - Causes the OG-12GM to use SDI Outputs 1-4, if possible. The combination of input and output settings determines whether the OG-12GM is muxing, demuxing or passing through.

Output Mapping

NOTE: Output pixel mapping applies only to 4K/UltraHD signals being transported on Quad Link 4x 3G outputs. 6G and 12G SDI are always Two Sample Interleave (2SI), and Quad Link 1.5G SDI is always Square Division (Quadrant).

Selects the output mapping for Quad Link 4x 3G outputs. Choose from the following:

Auto - Automatically selects the output pixel mapping based on the input pixel mapping detected.

- If 2SI is detected on the input, the output pixel mapping will be SQD.
- If Quad Link UltraHD/4K (SDI 1-4) SQD is detected on the input, the output pixel mapping will be 2SI.
- If Dual Link UltraHD/4K (SDI 1-2) 2SI is detected on the input, the output pixel mapping will be SQD.

2SI - Causes the OG-12GM to output a Two Sample Interleave (2SI) pixel mapped signal.

SQD - Causes the OG-12GM to output a Square Division (Quadrant) pixel mapped signal.

3G-SDI Mode

The OG-12GM's 3G-SDI Mode offers the choice between Auto, Level A, and Level B-Dual Link.

Auto - The OG-12GM will automatically select Level A or Level B-DL (Dual Link) based on the inputs detected.

- For Single Link 12G input, Auto will select 4x 3G Level A for the output.
- For a Single Link 3G Level A input, Auto will select 1x 3G Level B for the output.
- For HD Dual Link (2 x 1.5G) input, will select 1x 3G Level A for the output.

Level A - The SDI Outputs will carry a 3G-SDI Level A signal to support these configurations:

- 4x 3G-SDI Level B-Dual Link to 4x 3G-SDI Level A
- 2 x 1.5G (HD Dual Link) input to 3G Level A

Level B-DL (Dual Link) - The SDI Outputs will carry a 3G-SDI Level B-Dual Link signal to support these configurations:

- 12G-SDI to 4x 3G-SDI Level B-Dual Link
- 4x 3G-SDI Level A to 4x 3G-SDI Level B-Dual Link
- 2 x 1.5G (HD Dual Link) input to 3G Level B

To create Dual Stream outputs, use the Input tab to select required input option and configure as follows:

- Select Dual Stream (SDI 1-2) input. This requires SDI 1 and SDI 2 to each have the proper sources.
 - In the Output Tab under Output SDI, setting to Auto or Single Link results in Single Link 3GB-DS output.
 - In the Output Tab under Output SDI, setting to Dual Link or Quad Link results in a dual stream output where outputs SDI 1 and SDI 2 contain Input SDI 1 and 2, respectively.
- Select Data Stream A+B (SDI 1) or Auto. This requires a 3GB-DS input.
 - In the Output Tab under Output SDI, setting to Auto, Dual Link, or Quad Link results in a dual stream output where outputs SDI 1 and SDI 2 contain Input SDI 1 data streams A and B, respectively.
 - In the Output Tab under Output SDI, setting to Single Link results in Single Link 3GB-DS output.

Bit Depth

The Bit Depth control offers the choice between Auto, 10 bit, and 12 bit.

DA Function

The OG-12GM's Distribution Amplifier (DA) function is available for Single Link output signals.


On - When turned on, the DA function will duplicate SDI Output signals in the following ways:

- For Single Link outputs, SDI Output 1 is duplicated on SDI Outputs 2, 3, and 4.
- For Dual Link outputs, SDI Outputs 1 and 2 are duplicated on SDI Outputs 3 and 4 respectively.

NOTE: If the output is a Quad Link signal, the DA function is overridden and turned off.

Off - When turned off, no signal duplication will occur.

Figure 17. Output Tab Screen with DA Function turned on, duplicating the 12G-SDI input signal to all four SDI outputs

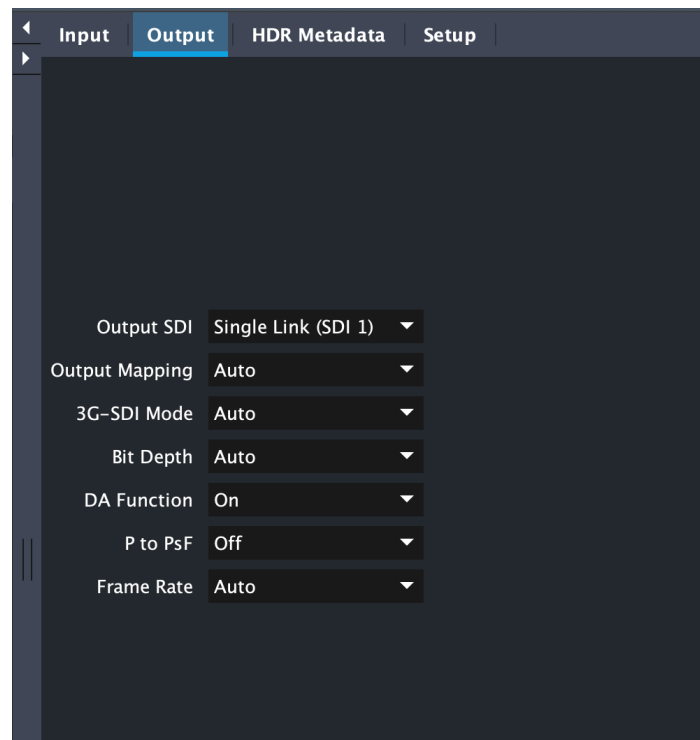

P to PsF

Choose to convert incoming progressive format video to PsF SDI video.

Off - (default) No conversion.

On - Converts the video to PsF (if it is progressive format and low frame rate).

Frame Rate

The Frame Rate control can be set to convert an integer input frame rate (like p60) to the matching fractional or non-integer output frame rate (like p59.94). The frame rate converter accomplishes this by dropping a complete video frame every 1001 frames. This control can also be set to convert a fractional or non-integer input frame rate (like p59.94) to an integer output frame rate (like p60), accomplished by repeating a complete video frame every 1000 frames.

NOTE: Because audio is disembedded prior to any video processing and then re-embedded after video processing, there will be no disruption to audio when the frame rate converter is working.


Off (default) - No frame rate conversion will be performed. The output frame rate will match the input frame rate.

Fractional - If the input frame rate is an integer frame rate, the output frame rate will be converted to the matching fractional frame rate. Fractional frame rate input signals are unaffected.

Integer - If the input frame rate is a fractional frame rate, the output frame rate will be converted to the matching integer frame rate. Integer frame rate input signals are unaffected.

HDR Metadata Tab Screen

Figure 18. HDR Metadata Tab Screen

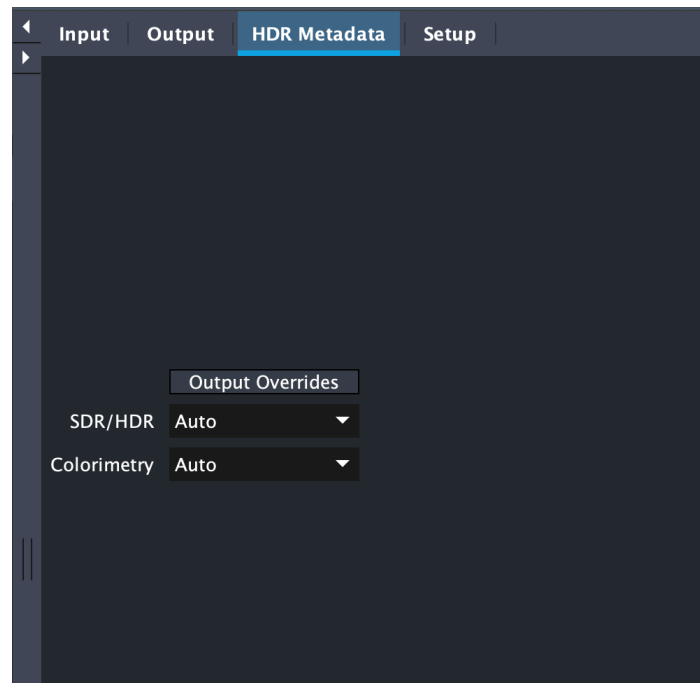

Click on the HDR Metadata tab to view and, if necessary, make changes to the OG-12GM High Dynamic Range metadata. For SDI, this metadata defines the VPID (Video Payload Identifier) for Transfer Characteristic and Colorimetry.

NOTE: HDR Metadata values do not modify video image data. They define the HDR metadata included in the video output.

For most workflows the Auto settings for the Output Overrides parameters are appropriate, which will automatically pass incoming HDR metadata, if present, through to the output. However, this metadata may need to be edited for a specific workflow, or to correct inaccurate incoming metadata.

Output Overrides

The override controls on the right can be used to replace incoming or missing HDR metadata with alternative values for the OG-12GM's SDI output.

SDR/HDR

This setting controls what Transfer Characteristic value is used for the SDI output VPID.

- Auto - Passes the Transfer Characteristic value from the video input through to the output.
- SDR - Overrides and sets the SDI output VPID for Transfer Characteristic to SDR.
- PQ - Overrides and sets the SDI output VPID for Transfer Characteristic to PQ.
- HLG - Overrides and sets the SDI output VPID for Transfer Characteristic to HLG.


Colorimetry

This setting determines what Colorimetry metadata values are applied to the SDI output.

- Auto - Passes the Colorimetry value from the input to the output.
 - If the incoming value is BT.709, Color VANC Packet, or Unknown, then BT.709 values are passed to the output.
 - If the incoming value is BT.2020, BT.2020 values are passed to the output.
- BT.709 - Overrides and sets the SDI VPID to BT.709.
- BT.2020 - Overrides and sets SDI VPID to BT.2020.

Setup Tab Screen

Figure 19. Setup Tab Screen

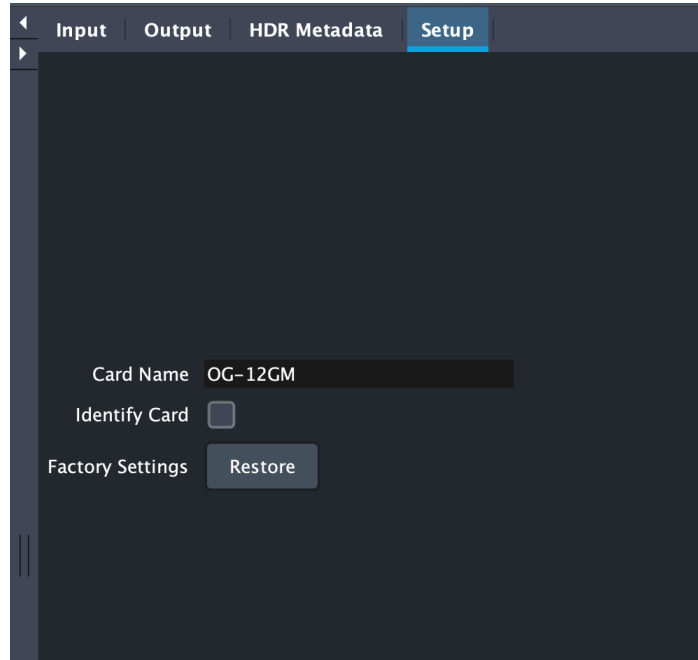

Click on the Setup tab to view and make changes to the card name, to identify the card in the openGear frame, or to restore card settings to factory default values.

Card Name - By default, this field is pre-populated with the card name OG-12GM. You can change the card name by editing the text in the Card Name field.

NOTE: Changing the Card Name in the Setup tab also changes the name of the card in the DashBoard tree view.

Identify Card - Select the checkbox to turn on the Identify Card function. When this function is turned on, an LED light on the front of the OG-12GM card inside the openGear frame will blink to help you quickly identify the card. Open the front of the openGear frame in order to see the light blinking.

Factory Settings - If you would like to revert the card settings to factory default values, click **Restore**. A confirmation prompt displays. Select "Yes" to restore factory settings. Select "No" to cancel.

Uploading New Software


Application software uploaded through DashBoard are .bin files.

To Upload New Software

When available, you can upload updated software to the OG-12GM through the DashBoard Control System by following the steps below.


1. Check the [AJA website for new software](#) for your OG-12GM. If new software is found, download it and uncompress the file archive (zip).
2. Click the Upload button in the lower panel of the DashBoard Control System to open the Upload Software Wizard.

Figure 20. Upload Software Wizard Window in Dashboard

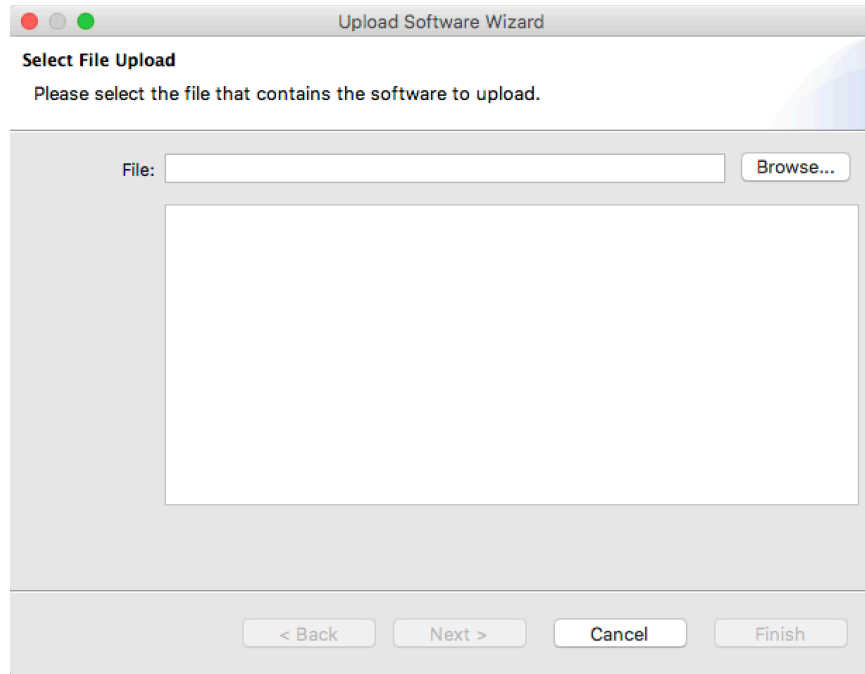


3. From the Upload Software Wizard window, select **Browse**.
4. Navigate to the location of the downloaded .bin file containing the software update. Select the .bin file, then select **Open**. The Upload Software Wizard window displays characteristics of the selected file for uploading.
5. Click **Finish**. The uploading process begins.

Figure 21. Uploading to Selected Devices Window in Dashboard

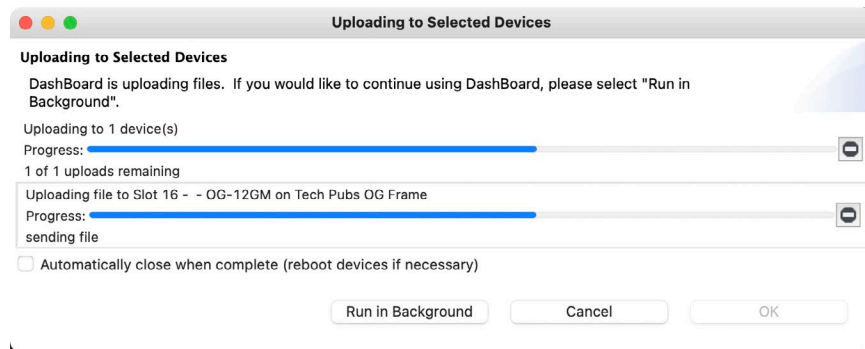

6. When the progress bar indicates that the uploading is finished and status indicates "Complete," click **OK**.
7. To verify the version of software or firmware currently installed on your card, select the Card tab from the center panel of Dashboard.

Figure 22. Card Tab Screen Indicating the Currently Installed Software Version

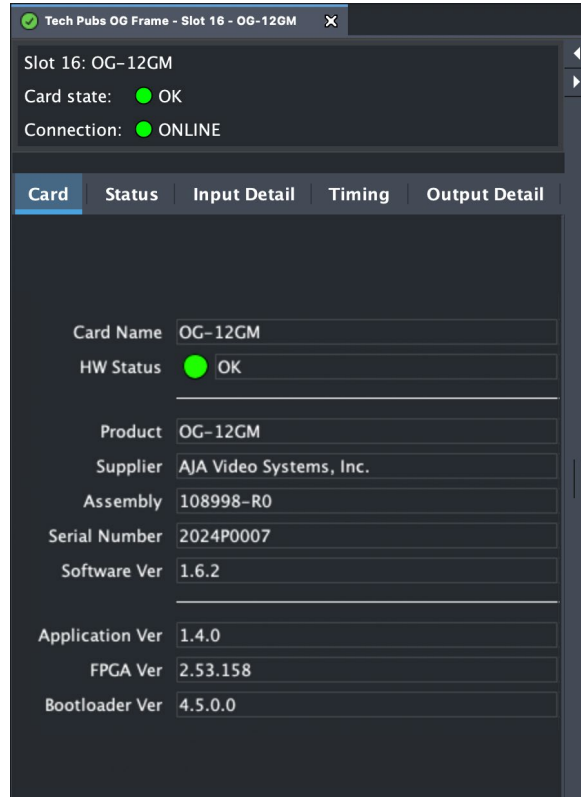

Rebooting


Rebooting is a standard function built in to the DashBoard Control System, and should only be performed if the board has become unresponsive.

WARNING: During a reboot, any card operations will be briefly interrupted, but will be restored once the reboot has completed.

To Reboot the OG-12GM

1. Click the Reboot button in the lower panel of DashBoard. The reboot confirmation message displays.

Figure 23. Reboot Confirmation Window

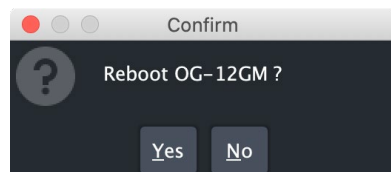

2. Click **Yes**. The message "Loading data, please wait. Refreshing device data" displays for a moment. The card will be offline for a few seconds, and any current operations will be interrupted.
3. Following a Reboot operation, the board configuration will return to the settings that were in place at the time of rebooting.

Appendix A – Specifications

OG-12GM Tech Specs

Video Formats

- (4K) 4096x2160p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
- (4K) 4096x2160PsF 23.98, 24, 25, 29.97, 30
- (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- (UltraHD) 3840x2160PsF 23.98, 24, 25, 29.97, 30
- (2K) 2048x1080p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
- (2K) 2048x1080PsF 23.98, 24, 25, 29.97, 30
- (HD) 1920x1080p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- (HD) 1920x1080PsF 23.98, 24, 25, 29.97, 30
- (HD) 1920x1080i 50, 59.94, 60
- (HD) 1280x720p 50, 59.94, 60
- (SD) 625i 50
- (SD) 525i 59.94
- YCbCr 4:2:2/4:4:4
- RGB 4:4:4, SMPTE or Full level
- 10 or 12-bit

NOTE: Raster and Frame Rate Dependent, please see OG-12GM Video Formats in the Download / Documents section of the website product page.

Video Input Digital

- 4x 12G-SDI BNC, SMPTE 259/292/372/424/2081/2082
- 4x 3 Gb SDI (Level A or B Dual Link)
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
 - (4K) 4096x2160PsF* 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
 - (Ultra HD) 3840x2160PsF* 23.98, 24, 25, 29.97, 30
- 4x 1.5 Gb SDI
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30
 - (4K) 4096x2160PsF 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160PsF 23.98, 24, 25, 29.97, 30
- 2x 6 Gb SDI
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- 2x 3 Gb SDI (Level B Dual Stream)
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30
 - (4K) 4096x2160PsF 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160PsF 23.98, 24, 25, 29.97, 30
- 2x 1.5 Gb SDI (Dual Link HD-SDI), SMPTE-372
 - (HD) 1920x1080p 47.95, 48, 50, 59.94, 60
- 2x 1.5 Gb SDI (Dual Stream HD-SDI)
 - (HD) 2x 1920x1080p 23.98, 24, 25, 29.97, 30
- 1x 12 Gb SDI

- (4K) 4096x2160p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
- (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- 1x 6 Gb SDI
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30
 - (2K) 2048x1080p 47.95, 48, 50, 59.94, 60
 - (HD) 1920x1080p 50, 59.94, 60
- 1x 3 Gb SDI (Level A or B Dual Link)
 - (2K) 2048x1080p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
 - (2K) 2048x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
 - (HD) 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080i 50, 59.94, 60
 - (HD) 1280x720p** 50, 59.94, 60
- 1x 3 Gb SDI (Level B Dual Stream)
 - (HD) 2x 1920x1080p 23.98, 24, 25, 29.97, 30
- 1x 1.5 Gb SDI
 - (2K) 2048x1080p 23.98, 24, 25, 29.97, 30
 - (2K) 2048x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080p 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080i 50, 59.94, 60
 - (HD) 1280x720p 50, 59.94, 60
- 1x 270 Mb SDI
 - (SD) 625i 50
 - (SD) 525i 59.94

*PsF is Level B Dual Link

**1280x720p is Level A Only

Video Output Digital

- 4x 12G-SDI BNC, SMPTE 259/292/372/424/2081/2082
- 4x 3 Gb SDI (Level A or B Dual Link)
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
 - (4K) 4096x2160PsF* 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
 - (Ultra HD) 3840x2160PsF* 23.98, 24, 25, 29.97, 30
- 4x 1.5 Gb SDI
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30
 - (4K) 4096x2160PsF 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160PsF 23.98, 24, 25, 29.97, 30
- 2x 6 Gb SDI
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- 2x 3 Gb SDI (Level B Dual Stream)
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30
 - (4K) 4096x2160PsF 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160PsF 23.98, 24, 25, 29.97, 30
- 2x 1.5 Gb SDI (Dual Link HD-SDI), SMPTE-372

- (HD) 1920x1080p 47.95, 48, 50, 59.94, 60
- 2x 1.5 Gb SDI (Dual Stream HD-SDI)
 - (2K) 2x 1920x1080p 23.98, 24, 25, 29.97, 30
 - (2K) 2x 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 2x 1920x1080p 23.98, 24, 25, 29.97, 30
 - (HD) 2x 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 2x 1280x720p 47.95, 48, 50, 59.94, 60
 - (HD) 2x 1920x1080i 47.95, 48, 50, 59.94, 60
- 1x 12 Gb SDI
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- 1x 6 Gb SDI
 - (4K) 4096x2160p 23.98, 24, 25, 29.97, 30
 - (UltraHD) 3840x2160p 23.98, 24, 25, 29.97, 30
 - (2K) 2048x1080p 47.95, 48, 50, 59.94, 60
 - (HD) 1920x1080p 50, 59.94, 60
- 1x 3 Gb SDI (Level A or B Dual Link)
 - (2K) 2048x1080p 23.98, 24, 25, 29.97, 30, 47.95, 48, 50, 59.94, 60
 - (2K) 2048x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
 - (HD) 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080i 50, 59.94, 60
 - (HD) 1280x720p** 50, 59.94, 60
- 1x 3 Gb SDI (Level B Dual Stream)
 - (2K) 2x 1920x1080p 23.98, 24, 25, 29.97, 30
 - (2K) 2x 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 2x 1920x1080p 23.98, 24, 25, 29.97, 30
 - (HD) 2x 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 2x 1280x720p 47.95, 48, 50, 59.94, 60
 - (HD) 2x 1920x1080i 47.95, 48, 50, 59.94, 60
- 1x 1.5 Gb SDI
 - (2K) 2048x1080p 23.98, 24, 25, 29.97, 30
 - (2K) 2048x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080p 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080PsF 23.98, 24, 25, 29.97, 30
 - (HD) 1920x1080i 50, 59.94, 60
 - (HD) 1280x720p 50, 59.94, 60
- 1x 270 Mb SDI
 - (SD) 625i 50
 - (SD) 525i 59.94

*PsF is Level B Dual Link

**1280x720p is Level A Only

Supported Conversions and Functions

- Quad 3G-SDI Level A to Single 12G-SDI
- Quad 3G-SDI Level B Dual Link to Single 12G-SDI
- Quad 3G-SDI Level A to Dual 6G-SDI
- Quad 3G-SDI Level B Dual Link to Dual 6G-SDI
- Quad 3G-SDI Level A to Quad 3G-SDI Level B Dual Link
- Quad 3G-SDI Level B Dual Link to Quad 3G-SDI Level A

- Quad 1.5G-SDI to Single 6G-SDI
- Dual 6G-SDI to Single 12G-SDI
- Dual 6G-SDI to Quad 3G-SDI Level A
- Dual 6G-SDI to Quad 3G-SDI Level B Dual Link
- Dual 3G-SDI Level A to Single 6G-SDI
- Dual 3G-SDI Level B Dual Stream to Single 6G-SDI
- Dual Link 1.5G-SDI to Single 3G-SDI Level A
- Dual Link 1.5G-SDI to Single 3G-SDI Level B Dual Link
- Dual Stream 1.5G-SDI to Single 3G-SDI Level B Dual Stream
- Single 12G-SDI to Quad 3G-SDI Level A
- Single 12G-SDI to Quad 3G-SDI Level B Dual Link
- Single 12G-SDI to Dual 6G-SDI
- Single 6G-SDI to Dual 3G-SDI Level A
- Single 6G-SDI to Dual 3G-SDI Level B Dual Stream
- Single 6G-SDI to Quad 1.5G-SDI
- Single 3G-SDI Level A to Dual Link 1.5G-SDI
- Single 3G-SDI Level B Dual Link to Dual Link 1.5G-SDI
- Single 3G-SDI Level B Dual Stream to Dual Stream 1.5G-SDI
- Two Sample Interleave (2SI) to Square Division (Quadrant) pixel mapping
- Square Division (Quadrant) to Two Sample Interleave (2SI) pixel mapping
- HDR VPID pass-through or override for Colorimetry and Transfer Characteristic
- Pass-through of Single Link 12G, 6G, 3G, 1.5G, and 270M SDI video
- Distribution Amplifier support
 - Single Link Outputs duplicated on outputs 2, 3, and 4
 - Dual Link Outputs duplicated on outputs 3, and 4
- Input signal diagnostics
- Input timing analyzer for Quad/Dual link signals

Cable Equalization

(Belden 1694A coax)

- 12 Gbps, 70m
- 6 Gbps, 100m
- 3 Gbps, 140m
- 1.5 Gbps, 200m
- 270 Mbps, 300m

Audio Input/Output Digital

- Passes SDI embedded audio, 24-bit, up to 16-channels

User Interface

- openGear DashBoard network control software via Windows, macOS, or Linux

Size

- openGear standard form factor, front slot and rear card
- Two slots required for each card

Weight

- 0.5 lb (0.3 kg)

Power

- openGear frame compatible, 13 watts max per card

Environment

- Safe Operating Temperature: 0 to 40 C (32 to 104 F)
 - Safe Storage Temperature (Power OFF): -40 to 60 C (-40 to 140 F)
 - Operating Relative Humidity: 10-90% noncondensing
 - Operating Altitude: <3,000 meters (<10,000 feet)
-

Appendix B – Safety and Compliance

Federal Communications Commission (FCC) Compliance Notices

Class A Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian ICES Statement

Canadian Department of Communications Radio Interference Regulations

This digital apparatus does not exceed the Class A limits for radio-noise emissions from a digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class A digital apparatus complies with Canadian ICES-003.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada. Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

European Union, European Free Trade Association (EFTA) and United Kingdom Regulatory Compliance

This equipment may be operated in the countries that comprise the member countries of the European Union, European Free Trade Association and the United Kingdom. These countries, listed in the following paragraph, are referred to as The European Community throughout this document:

AUSTRIA, BELGIUM, BULGARIA, CROATIA, CZECH REPUBLIC, DENMARK, ESTONIA, FINLAND, FRANCE, GERMANY, GREECE, HUNGARY, ICELAND, IRELAND, ITALY, LATVIA, LIECHTENSTEIN, LITHUANIA, LUXEMBOURG, MALTA, NETHERLANDS, NORWAY, POLAND, PORTUGAL, REPUBLIC OF CYPRUS, ROMANIA, SLOVAK REPUBLIC, SLOVENIA, SPAIN, SWEDEN, SWITZERLAND, UNITED KINGDOM

Declaration of Conformity

Marking by these symbols indicates compliance with the Essential Requirements of the EMC Directive of the European Union 2014/30/EU.



This equipment meets the following conformance standards:

Safety

EN 62368-1: 2014 + A11 (T-Mark License),
IEC 62368-1: 2014; (CB Scheme Certificate)

Additional licenses issued for specific countries available on request.

Emissions

EN 55032: 2015 + A11: 2020, CISPR 32: 2015, EN 61000-3-2: 2014, EN 61000-3-3: 2013

Immunity

EN 55103-2: 2009, EN 61000-4-2: 2009, EN 61000-4-3: 2006+ A1: 2008 + A2: 2010,
EN 61000-4-4: 2012, EN 61000-4-5: 2014/A1: 2017, EN 61000-4-6: 2013,
EN 61000-4-11: 2020

Environments: E2, E3 and E4

The product is also licensed for additional country specific standards as required for the International Marketplace.



Warning! This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung! Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention! Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

Recycling Notice



This symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Korea KCC Compliance Statement

사 용 자 안 내 문
이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

Taiwan Compliance Statement

警告使用者： 這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。
--

This is a Class A product based on the standard of the Bureau of Standards, Metrology and Inspection (BSMI) CNS 13438, Class A. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Japanese Compliance Statement

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

This is a Class A product based on the standard of the VCCI Council (VCCI 32: 2016). If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.

Translated Warning and Caution Messages

The following caution statements, warning conventions, and warning messages apply to this product and manual.



Warning Symbol



Hazard Symbol



Caution Symbol

Before Operation Please Read These Instructions



Warning! Read and follow all warning notices and instructions marked on the product or included in the documentation.

Avertissement! Lisez et conformez-vous à tous les avis et instructions d'avertissement indiqués sur le produit ou dans la documentation.

Warnung! Lesen und befolgen Sie die Warnhinweise und Anweisungen, die auf dem Produkt angebracht oder in der Dokumentation enthalten sind.

¡Advertencia! Lea y siga todas las instrucciones y advertencias marcadas en el producto o incluidas en la documentación.

Aviso! Leia e siga todos os avisos e instruções assinalados no produto ou incluídos na documentação.

Avviso! Leggere e seguire tutti gli avvisi e le istruzioni presenti sul prodotto o inclusi nella documentazione.



Warning! Do not use this device near water and clean only with a dry cloth.

Avertissement! N'utilisez pas cet appareil près de l'eau et nettoyez-le seulement avec un tissu sec.

Warnung! Das Gerät nicht in der Nähe von Wasser verwenden und nur mit einem trockenen Tuch säubern.

¡Advertencia! No utilice este dispositivo cerca del agua y límpielo solamente con un paño seco.

Aviso! Não utilize este dispositivo perto da água e limpe-o somente com um pano seco.

Avviso! Non utilizzare questo dispositivo vicino all'acqua e pulirlo soltanto con un panno asciutto.



Warning! Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Avertissement! Ne bloquez aucune ouverture de ventilation. Suivez les instructions du fabricant lors de l'installation.

Warnung! Die Lüftungsöffnungen dürfen nicht blockiert werden. Nur gemäß den Anweisungen des Herstellers installieren.

¡Advertencia! No bloquee ninguna de las aberturas de la ventilación. Instale de acuerdo con las instrucciones del fabricante.

Aviso! Não obstrua nenhuma das aberturas de ventilação. Instale de acordo com as instruções do fabricante.

Avviso! Non ostruire le aperture di ventilazione. Installare in conformità con le istruzioni del fornitore.



Warning! Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Avertissement! N'installez pas l'appareil près d'une source de chaleur telle que des radiateurs, des bouches d'air de chauffage, des fourneaux ou d'autres appareils (amplificateurs compris) qui produisent de la chaleur.

Warnung! Nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizregistern, Öfen oder anderen Wärme erzeugenden Geräten (einschließlich Verstärkern) aufstellen.

¡Advertencia! No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas u otros aparatos (incluidos amplificadores) que generan calor.

Aviso! Não instale perto de nenhuma fonte de calor tal como radiadores, saídas de calor, fogões ou outros aparelhos (incluindo amplificadores) que produzam calor.

Avviso! Non installare vicino a fonti di calore come termosifoni, diffusori di aria calda, stufe o altri apparecchi (amplificatori compresi) che emettono calore.



Warning! Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Avertissement! Référez-vous au personnel de service qualifié pour tout entretien. L'entretien est exigé quand l'appareil a été endommagé de quelque manière que ce soit, par exemple lorsque le cordon d'alimentation ou la prise sont endommagés, que du liquide a été versé ou des objets sont tombés dans l'appareil, que l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou est tombé.

Warnung! Das Gerät sollte nur von qualifizierten Fachkräften gewartet werden. Eine Wartung ist fällig, wenn das Gerät in irgendeiner Weise beschädigt wurde, wie bei beschädigtem Netzkabel oder Netzstecker, falls Flüssigkeiten oder Objekte in das Gerät gelangen, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht ordnungsgemäß funktioniert oder fallen gelassen wurde.

¡Advertencia! Consulte al personal calificado por cuestiones de reparación. El servicio de reparación se requiere cuando el dispositivo ha recibido cualquier tipo de daño, por ejemplo cable o espigas dañadas, se ha derramado líquido o se han caído objetos dentro del dispositivo, el dispositivo ha sido expuesto a la lluvia o humedad, o no funciona de modo normal, o se ha caído.

Aviso! Remeta todos os serviços de manutenção para o pessoal de assistência qualificado. A prestação de serviços de manutenção é exigida quando o dispositivo foi danificado mediante qualquer forma, como um cabo de alimentação ou ficha que se encontra danificado/a, quando foi derramado líquido ou caíram objectos sobre o dispositivo, quando o dispositivo foi exposto à chuva ou à humidade, quando não funciona normalmente ou quando foi deixado cair.

Avviso! Fare riferimento al personale qualificato per tutti gli interventi di assistenza. L'assistenza è necessaria quando il dispositivo è stato danneggiato in qualche modo, ad esempio se il cavo di alimentazione o la spina sono danneggiati, è stato rovesciato del liquido è stato rovesciato o qualche oggetto è caduto nel dispositivo, il dispositivo è stato esposto a pioggia o umidità, non funziona correttamente o è caduto.



Warning! Disconnect the external AC power supply line cord(s) from the mains power before moving the unit.

Avertissement! Retirez le ou les cordons d'alimentation en CA de la source d'alimentation principale lorsque vous déplacez l'appareil.

Warnung! Trennen Sie die Wechselstrom-Versorgungskabel vom Netzstrom, bevor Sie das Gerät verschieben.

¡Advertencia! Cuando mueva la unidad desenchufe de la red eléctrica el/los cable(s) de la fuente de alimentación CA tipo brick.

Advertência! Remova os cabos CA de alimentação brick da rede elétrica ao mover a unidade.

Avvertenza! Scollegare il cavo dell'alimentatore quando si sposta l'unità.



Hazard! High Voltage. This situation or condition can cause injury due to electric shock.

Avertissement! Tension élevée. Cette situation ou condition peut causer des blessures dues à un choc électrique.

Warnung! Hochspannung. Diese Situation oder Bedingung kann zu Verletzungen durch Stromschlag führen.

¡Advertencia! Alto voltaje. Esta situación o condición puede causar lesiones debidas a una descarga eléctrica.

Aviso! Alta Tensão. Esta situação ou condição pode causar danos devido a choques elétricos.

Avviso! Alta tensione. Questa situazione o condizione può causare lesioni a causa di scosse elettriche.



Warning! Only use attachments and accessories specified and/or sold by the manufacturer.

Avertissement! Utilisez seulement les attaches et accessoires spécifiés et/ou vendus par le fabricant.

Warnung! Verwenden Sie nur Zusatzgeräte und Zubehör angegeben und / oder verkauft wurde durch den Hersteller.

¡Advertencia! Utilice solamente los accesorios y conexiones especificados y/o vendidos por el fabricante.

Aviso! Utilize apenas equipamentos/acessórios especificados e/ou vendidos pelo fabricante.

Avviso! Utilizzare soltanto i collegamenti e gli accessori specificati e/o venduti dal produttore.



Warning! Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Avertissement! La sécurité de la prise polarisée ou de la prise de type mise à la terre ne doit en aucun cas être empêchée de fonctionner. Une prise polarisée a deux broches, l'une étant plus large que l'autre. Une prise de type mise à la terre a deux broches et une troisième broche pour la mise à la terre. La broche large ou la troisième broche sont fournies pour votre sécurité. Si la prise fournie ne s'insère pas dans votre prise femelle, consultez un électricien pour le remplacement de la prise femelle obsolète.

Warnung! Der Sicherheitszweck des gepolten bzw. Schukosteckers ist zu berücksichtigen. Ein gepolter Stecker verfügt über zwei Pole, von denen einer breiter als der andere ist. Ein Schukostecker verfügt neben den zwei Polen noch über einen dritten Pol zur Erdung. Der breite Pol bzw. der Erdungspol dienen der Sicherheit. Wenn der zur Verfügung gestellte Stecker nicht in Ihren Anschluss passt, konsultieren Sie einen Elektriker, um den veralteten Anschluss zu ersetzen.

¡Advertencia! No eche por tierra la finalidad del tipo de enchufe polarizado con conexión a tierra. Un enchufe polarizado tiene dos espigas, una más ancha que la otra. Un enchufe con conexión a tierra tiene dos espigas iguales y una tercera espiga que sirve para la conexión a tierra. La espiga ancha, o la tercera espiga, sirven para su seguridad. Si el enchufe suministrado no encaja en el tomacorriente, consulte con un electricista para reemplazar el tomacorriente obsoleto.

Aviso! Não anule a finalidade da segurança da ficha polarizada ou do tipo ligação terra. Uma ficha polarizada tem duas lâminas sendo uma mais larga do que a outra. Uma ficha do tipo de ligação à terra tem duas lâminas e um terceiro terminal de ligação à terra. A lâmina larga ou o terceiro terminal são fornecidos para sua segurança. Se a ficha fornecida não couber na sua tomada, consulte um electricista para a substituição da tomada obsoleta.

Avviso! Non compromettere la sicurezza della spina polarizzata o con messa a terra. Una spina polarizzata ha due spinotti, di cui uno più largo. Una spina con messa a terra ha due spinotti e un terzo polo per la messa a terra. Lo spinotto largo o il terzo polo sono forniti per motivi di sicurezza. Se la spina fornita non si inserisce nella presa di corrente, contattare un elettricista per la sostituzione della presa obsoleta.



Warning! Since the Mains plug is used as the disconnection for the device, it must remain readily accessible and operable.

Avertissement! Puisque la prise principale est utilisée pour débrancher l'appareil, elle doit rester aisément accessible et fonctionnelle.

Warnung! Da der Netzstecker als Trennvorrichtung dient, muss er stets zugänglich und funktionsfähig sein.

¡Advertencia! Puesto que el enchufe de la red eléctrica se utiliza como dispositivo de desconexión, debe seguir siendo fácilmente accesible y operable.

Aviso! Dado que a ficha principal é utilizada como a desconexão para o dispositivo, esta deve manter-se prontamente acessível e funcional.

Avviso! Poiché il cavo di alimentazione viene usato come dispositivo di sconnessione, deve rimanere prontamente accessibile e operabile.



Warning! Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.

Avertissement! Protégez le cordon d'alimentation pour que l'on ne marche pas dessus ou qu'on le pince, en particulier au niveau des prises mâles, des réceptacles de convenance, et à l'endroit où il sort de l'appareil.

Warnung! Vermeiden Sie, dass auf das Netzkabel getreten oder das Kabel geknickt wird, insbesondere an den Steckern, den Steckdosen und am Kabelausgang am Gerät.

¡Advertencia! Proteja el cable de corriente para que no se le pise ni apriete, en especial cerca del enchufe, los receptáculos de conveniencia y el punto del que salen del equipo.

Aviso! Proteja o cabo de alimentação de ser pisado ou de ser comprimido particularmente nas fichas, em tomadas de parede de conveniência e no ponto de onde sai do dispositivo.

Avviso! Proteggere il cavo di alimentazione in modo che nessuno ci cammini sopra e che non venga schiacciato soprattutto in corrispondenza delle spine e del punto in cui esce dal dispositivo.



Warning! Unplug this device during lightning storms or when unused for long periods of time.

Avertissement! Débranchez cet appareil pendant les orages avec éclairs ou s'il est inutilisé pendant de longues périodes.

Warnung! Das Gerät ist bei Gewitterstürmen oder wenn es über lange Zeiträume ungenutzt bleibt vom Netz zu trennen.

¡Advertencia! Desenchufe este dispositivo durante tormentas eléctricas o cuando no se lo utilice por largos periodos del tiempo.

Aviso! Desconecte este dispositivo da tomada durante trovoadas ou quando não é utilizado durante longos períodos de tempo.

Avviso! Utilizzare soltanto i collegamenti e gli accessori specificati e/o venduti dal produttore, quali il treppiedi e l'esoscheletro.



Warning! Ensure Mains Power is disconnected before installing the OG-12GM modules into the frame, or installing and removing options. If a Mains switch is not provided, the power cord(s) of this equipment provide the means of disconnection. The socket outlet must be installed near the equipment and must be easily accessible.

Avertissement ! Avant d'installer des modules OG-12GM dans la structure, ainsi qu'avant d'installer ou d'enlever des options, assurez-vous d'avoir déconnecté l'alimentation électrique. S'il n'y a pas d'interrupteur électrique, il faut débrancher les câbles électriques de l'équipement. La prise électrique doit être située à proximité de l'équipement et doit être aisément accessible.

Achtung! Sicherstellen, dass die Netzleitung entkoppelt ist, bevor die OG-12GM Module in das Gestell eingebaut oder Wahlteile eingebaut bzw. ausgebaut werden. Wenn kein Netzschalter vorgesehen ist, dient das bzw. dienen die Netzkabel dieser Vorrichtung als Entkopplungsmittel. Die Steckdose muss in der Nähe der Vorrichtung installiert und leicht zugänglich sein.

Avvertenza. Accertarsi che l'alimentazione di rete sia scollegata prima di installare i moduli OG-12GM nel frame o di installare e rimuovere componenti opzionali. Se non è presente un interruttore di accensione/spengimento, occorre scollegare il cavo (o i cavi) di alimentazione di questo apparecchio dalla presa di corrente. La presa di corrente deve essere situata presso l'apparecchio e facilmente accessibile.

Aviso! Certifique-se que a fonte principal de energia elétrica está desconectada antes de instalar os módulos OG-12GM no bastidor ou antes de instalar e remover opções. Se o interruptor principal não existir, o cabo elétrico deste equipamento proporciona o meio de desconexão. A tomada elétrica deverá ser instalada perto do equipamento e deverá ser de fácil acesso.

¡Advertencia! Asegúrese que la red de alimentación está desconectada antes de instalar los módulos OG-12GM en el marco, o la instalación y extracción de opciones. Si no se proporciona un conmutador de red, el cable de alimentación de este equipo proporciona los medios de desconexión. El zócalo tomacorriente debe estar instalado cerca del equipo y debe ser fácilmente accesible.



Warning! Dual Power Cord Notice—please read this. To reduce the risk of electrical shock, disconnect both power cords before servicing equipment.

Avertissement ! Avis concernant la double alimentation électrique—à lire soigneusement. Pour éviter tout risque d'électrocution, débranchez les deux câbles électriques avant d'intervenir sur l'équipement.

Achtung! Hinweis auf Doppel-Netzkabel-bitte lesen. Um das Risiko eines Elektroschocks zu verringern, müssen beide Netzkabel ausgestöpselt werden, bevor die Vorrichtung gewartet wird.

Avvertenza. Avviso concernente il cavo di alimentazione doppio - leggere attentamente. Per ridurre il rischio di elettrocuzione, scollegare entrambi i cavi di alimentazione prima di eseguire la manutenzione o riparazioni di questo apparecchio.

Aviso! Aviso de Cabo Elétrico Duplo - por favor, leia isto. Para reduzir o risco de choque elétrico, desconecte ambos os cabos elétricos antes de fazer manutenção ao equipamento.

¡Advertencia! Aviso del doble cable de alimentación - leer esto por favor. Para reducir el riesgo de descarga eléctrica, desconecte ambos cables de alimentación antes de dar servicio al equipo.



Caution! The OG-X-FR front fan door is heavy. Remove with Caution.

Attention! La porte du ventilateur avant OG-X-FR est lourde. Retirer avec précaution.

Achtung! Die OG-X-FR -Frontlüfter Tür ist schwer. Bitte vorsichtig entfernen.

¡Precaución! La puerta del ventilador frontal OG-X-FR es pesado. Extraer con precaución.

Atenção! A porta do ventilador frontal OG-X-FR é pesado. Remova com cuidado.

Attenzione! La porta ventola anteriore OG-X-FR è pesante. Rimuovere con cautela.



Warning! Do not open the chassis. There are no user-serviceable parts inside. Opening the chassis will void the warranty unless performed by an AJA service center or licensed facility.

Avertissement! Ne pas ouvrir le châssis. Aucun élément à l'intérieur du châssis ne peut être réparé par l'utilisateur. La garantie sera annulée si le châssis est ouvert par toute autre personne qu'un technicien d'un centre de service ou d'un établissement agréé AJA.

Warnung! Öffnen Sie das Gehäuse nicht. Keine der Geräteteile können vom Benutzer gewartet werden. Durch das Öffnen des Gehäuses wird die Garantie hinfällig, es sei denn, solche Wartungsarbeiten werden in einem AJA-Service-Center oder einem lizenzierten Betrieb vorgenommen.

¡Advertencia! No abra el chasis. El interior no contiene piezas reparables por el usuario. El abrir el chasis anulará la garantía a menos que se lo haga en un centro de servicio AJA o en un local autorizado.

Advertência! Não abra o chassi. Não há internamente nenhuma peça que permita manutenção pelo usuário. Abrir o chassi anula a garantia, a menos que a abertura seja realizada por uma central de serviços da AJA ou por um local autorizado.

Avvertenza! Non aprire lo chassis. All'interno non ci sono parti riparabili dall'utente. L'apertura dello chassis invaliderà la garanzia se non viene effettuata da un centro ufficiale o autorizzato AJA.



Caution! To meet safety regulations for leakage current, connect the dual power supplies to separate branch circuits.

¡Advertencia! Para cumplir con las normas de seguridad para la corriente de fuga, conecte las dos fuentes de alimentación para circuitos derivados diferentes.

Attention! Pour répondre aux mesures de sécurité concernant le courant de fuite, raccorder les sources d'alimentation doubles à des circuits de dérivation distincts.

Warnung! Zur Erfüllung der Sicherheitsbestimmungen bezüglich Reststrom schließen Sie bitte die zwei Netzteile an unterschiedlichen Abzweigleitungen an.

Cuidado! Para atender aos regulamentos de segurança para correntes de fuga, conecte as fontes duplas a circuitos elétricos separados.

Attenzione! Per soddisfare le norme di sicurezza sulla corrente di perdita, collegare i doppi alimentatori a circuiti derivati separati.

Warranty and Liability Information

Limited Warranty on Hardware

AJA Video Systems, Inc. (AJA Video) warrants that the hardware product, not including software components, will be free from defects in materials and workmanship for a period of five years from the date of purchase. AJA Video provides a separate software warranty as part of the license agreement applicable to software components.

If the Customer brings a valid claim under this limited warranty for a hardware product (hereafter, a “product”) during the applicable warranty period, AJA Video will, at its sole option and as the Customer’s sole remedy for breach of the above warranty, provide one of the following remedies:

- Repair or facilitate the repair the product within a reasonable period of time, free of charge for parts and labor.
- Replace the product with a direct replacement or with a product that performs substantially the same function as the original product.
- Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

To obtain service under this warranty, the Customer must notify AJA Video of the defect before expiration of the warranty period and make suitable arrangements for the performance of service by contacting AJA Video support through the channels set forth on the support contacts web page at <https://www.aja.com/support>.

Except as stated, the Customer shall bear all shipping, packing, insurance and other costs, excluding parts and labor, to effectuate repair. Customer shall pack and ship the defective product to a service center designated by AJA Video, with shipping charges prepaid. AJA Video shall pay to return the product to Customer, but only if to a location within the country in which the AJA Video service center is located. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO SOME OR ALL OF THE TERMS OF THIS PARAGRAPH MAY NOT APPLY TO YOU.

Limitation of Liability

Under no circumstances shall AJA video BE LIABLE IN ANY WAY FOR ANY LOST, CORRUPTED OR DESTROYED DATA, FOOTAGE OR WORK, OR FOR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOST PROFITS, OR FOR ANY THIRD PARTY CLAIM, IN CONNECTION WITH THE PRODUCT, WHETHER RESULTING FROM DEFECTS IN THE PRODUCT, SOFTWARE OR HARDWARE FAILURE, OR ANY OTHER CAUSE WHATSOEVER, EVEN IF AJA VIDEO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. AJA VIDEO’S LIABILITY IN CONNECTION WITH THE PRODUCT SHALL UNDER NO CIRCUMSTANCES EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT. The foregoing limitations apply even if any remedy set forth in this LIMITED WARRANTY fails of its essential purpose. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO SOME OR ALL OF THE TERMS OF THIS PARAGRAPH MAY NOT APPLY TO YOU.

Governing Law and Language; Your Rights

This limited warranty is the only warranty provided by AJA Video on the hardware product. It supersedes all prior or contemporaneous understandings regarding such subject matter. No amendment to or modification of this warranty will be binding unless in writing and signed by AJA Video. The laws of the State of California, USA will govern this warranty and any dispute arising from it. Any translation of this Agreement is intended for convenience and to meet local requirements and in the event of a dispute between the English and any non-English versions, the English version of this warranty will govern. This limited warranty gives you specific legal rights and you may have other rights that vary from jurisdiction to jurisdiction, some of which are noted above.

Software License Agreement

AJA VIDEO SYSTEMS, INC.

THIS IS AN AGREEMENT BETWEEN YOU AND AJA VIDEO SYSTEMS, INC. (“AJA”) THAT GOVERNS YOUR USE OF THE SOFTWARE ACCOMPANYING THIS LICENSE (E.G., AS INSTALLED ON THE DEVICE WITH WHICH THIS LICENSE IS PROVIDED).

The “AJA Software” referenced in this Agreement includes all such software, whether made available to you on disk, in read only memory, on any other media or in any other form, and all updates, corrections, enhancements and new versions of such software made available by AJA, together with all related documentation. BY INSTALLING OR USING THE AJA SOFTWARE, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT INSTALL OR USE IT AND, IF APPLICABLE, RETURN THE AJA SOFTWARE TO THE PLACE WHERE YOU OBTAINED IT FOR A REFUND.

1. License Grant. AJA hereby grants you a nonexclusive, personal, non-sublicenseable and limited license to install and use AJA Software on a computer or AJA device. The foregoing license also includes the right to make copies of the AJA Software in machine-readable form for installation and backup purposes only, and provided that each copy you make must include all copyright or other proprietary notices contained on the original.
2. Limitations. You may not decompile, reverse engineer, disassemble, modify, or create derivative works of the AJA Software or any part thereof except to the extent (if any) authorized by applicable law notwithstanding the foregoing restriction. You may not rent, lease, lend, loan, distribute or act as a service bureau or “cloud service” provider with respect to use of the AJA Software or any functionality thereof. THE AJA SOFTWARE IS NOT INTENDED FOR USE IN THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL SYSTEMS, LIFE SUPPORT MACHINES OR OTHER EQUIPMENT IN WHICH THE FAILURE OF THE AJA SOFTWARE COULD LEAD TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE.
3. Reservation of Rights. The AJA Software is protected by law, including without limitation copyright law. The AJA Software is licensed, not sold, to you. AJA and its licensors reserve all rights not expressly granted to you by this Agreement. You own the media on which the AJA Software is recorded but AJA and/or AJA's licensor(s) retain ownership of the AJA Software itself. You may not use the AJA Software for any illegal purpose.
4. Transfer. You may make a one-time permanent transfer of all of your license rights to the AJA Software to another person or entity, provided that: (a) you transfer all of the AJA Software, including all its component parts, original media, printed materials and this Agreement; (b) you do not retain any copies of the AJA Software, including any copies stored on a computer or other device; and (c) you transfer the AJA Software subject to this Agreement, and the person or entity receiving the AJA Software accepts the terms and conditions of this Agreement.
5. NFR (Not for Resale) Copies and Add-On Features: Notwithstanding anything to the contrary in this Agreement, (a) AJA Software that is labeled “Not for Resale” or otherwise provided to you on a promotional or demonstration basis may be used only for your demonstration, testing and evaluation purposes and may not be resold or transferred; and (b) AJA may make available certain software components (“Add-On Features”) under separate terms and conditions, in which case those separate terms and conditions apply and the Add-On Features are not considered AJA Software under this Agreement.
6. Termination. Your rights in the AJA Software are conditioned on complying with this Agreement, and those rights (together with this Agreement) will terminate automatically, without notice from AJA, if you fail to comply with any term(s) of this Agreement. Upon termination of this Agreement, you must cease all use of the AJA Software and destroy all copies, full or partial, of the AJA Software in your possession or control.
7. Limited Warranty on AJA Software. If you comply with all terms of this Agreement and use the AJA Software in accordance with its documentation, and you install any patches or other updates made available to the AJA Software by AJA, AJA warrants that the AJA Software will perform substantially in accordance with its documentation for a period of ninety (90) days from the date of your original retail purchase. Your

exclusive remedy under this warranty will be, at AJA's option, a refund of the purchase price of the product containing the AJA Software or an update to or replacement of the AJA Software (or applicable component of it). THIS LIMITED WARRANTY AND ANY IMPLIED WARRANTIES ON THE AJA SOFTWARE INCLUDING, BUT NOT LIMITED TO, ANY WARRANTIES OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OR OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF ORIGINAL RETAIL PURCHASE. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION.

8. Disclaimer of Other Warranties on AJA Software. EXCEPT FOR THE LIMITED WARRANTY ON AJA SOFTWARE SET FORTH ABOVE, AJA AND AJA'S LICENSORS (COLLECTIVELY REFERRED TO AS "AJA" FOR THE PURPOSES OF SECTIONS 8 AND 9) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE AJA SOFTWARE, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, AND OF QUIET ENJOYMENT. FURTHER, AJA DOES NOT MAKE ANY WARRANTY REGARDING NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SUBJECT ONLY TO THE LIMITED WARRANTY SET FORTH IN SECTION 7, YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE AJA SOFTWARE IS AT YOUR SOLE RISK. AJA DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE AJA SOFTWARE, THAT THE AJA SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE AJA SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE AJA SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY AJA OR AN AJA AUTHORIZED REPRESENTATIVE WILL CREATE A WARRANTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO SOME OR ALL OF THE TERMS OF THIS PARAGRAPH MAY NOT APPLY TO YOU.

9. Limitation of Liability. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL AJA BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR LOST PROFITS WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE AJA SOFTWARE, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (E.G., WHETHER UNDER CONTRACT, TORT OR OTHERWISE) AND EVEN IF AJA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL AJA'S TOTAL LIABILITY TO YOU FOR ALL DAMAGES (INCLUDING WITHOUT LIMITATION BREACH OF WARRANTY) EXCEED THE AMOUNT OF FIFTY DOLLARS (\$50.00). THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ANY REMEDY SET FORTH IN THIS AGREEMENT FAILS OF ITS ESSENTIAL PURPOSE. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO SOME OR ALL OF THE TERMS OF THIS PARAGRAPH MAY NOT APPLY TO YOU.

10. Export Law Assurances. You may not use or otherwise export or reexport the AJA Software except as authorized by United States law and the laws of the jurisdiction in which the AJA Software was obtained. In particular, but without limitation, the AJA Software may not be exported or re-exported (a) into (or to a national or resident of) any U.S. embargoed countries, or (b) to anyone on the U.S. Treasury Department's list of Specially Designated Nationals or the U.S. Department of Commerce Denied Persons List or Entity List or any similar legal designation. By using the AJA Software, you represent and warrant that you are not located in, under control of, or a national or resident of any such country or on any such list.

11. Government End Users. The AJA Software including its documentation is a "Commercial Item", as that term is defined at 48 C.F.R. § 2.101, consisting of "Commercial Computer Software" and "Commercial Computer Software Documentation", as such terms are used in 48 C.F.R. § 12.212 or 48 C.F.R. § 227.7202 (or their successors), as applicable. Consistent with these provisions, the AJA Software is licensed to U.S. Government end users (a) only as a Commercial Item and (b) with only those rights as are granted to all other end users pursuant to this Agreement. Unpublished-rights reserved under the copyright laws of the United States.

12. Controlling Law and Severability. This Agreement will be governed by and construed in accordance with the laws of the State of California, as applied to agreements entered into and to be performed entirely within California between California residents. This Agreement will not be governed by the United Nations

Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If for any reason a court of competent jurisdiction finds any provision, or portion thereof, to be unenforceable, the remainder of this Agreement will continue in full force and effect.

13. Complete Agreement; Governing Language. This Agreement constitutes the entire agreement between the parties with respect to the use of the AJA Software licensed hereunder and supersedes all prior or contemporaneous understandings regarding such subject matter. No amendment to or modification of this Agreement will be binding unless in writing and signed by AJA. Any translation of this Agreement is intended for convenience and to meet local requirements and in the event of a dispute between the English and any non-English versions, the English version of this Agreement will govern.

Index

Symbols

3G-SDI Mode 23

A

AJA Software License Agreement 45
AJA Support 2

B

Bit Depth 21, 24

C

Card Name 15
Card Tab Screen
Colorimetry Override 26
Configuration Settings
 Stored in OG cards 13

D

DA Function 24
DashBoard Control System 9
 Card Tab Screen
 Control Interface Basic
 Components 13
 Documentation 13
 Downloading 13
 HDR Metadata Tab Screen 25
 Input Detail Tab Screen 17
 Input Tab Screen 19
 Output Detail Tab Screen 18
 Output Tab Screen 21
 Rebooting 29
 Requirements 13
 Setup Tab Screen 27
 Status Tab Screen 16
 Timing Tab Screen 17
 Uploading New Software 27
 Using 13
Diagram
 Simplified Block 6

F

Features 5
Frame Rate 25

H

HDR Metadata Tab Screen 25

I

Input Detail Tab Screen 17
Input Mapping 20
Input SDI 20
Input Tab Screen 19
Installation 9
 Cabling 12

Front Card Installation 10

Rear Card Installation 9

O

openGear and AJA 8
Output Detail Tab Screen 18
Output Mapping 23
Output Overrides 26
Output SDI 22
Output Tab Screen 21
Overview 5

P

P to PsF 24

S

SDR/HDR Overrides 26
Setup Tab Screen 27
Signal Indicators
 DashBoard Control System 7
Specifications 30
Status Tab Screen 16

T

Timing Tab Screen 17

U

User Controls 8

V

Video Format 21